

Table of Contents

BS2_RemoveDeviceZoneAGEntranceLimit	1
Declaration	1
Parameter	1
Return Value	1
See Also	1

[Zone Control API](#) > [BS2_RemoveDeviceZoneAGEntranceLimit](#)

BS2_RemoveDeviceZoneAGEntranceLimit

Removes selected Ethernet access group entrance limit.

Declaration

```
#include "BS_API.h"

int BS2_RemoveDeviceZoneAGEntranceLimit(void* context, BS2_DEVICE_ID
deviceId, const BS2_ZONE_ID* Ids, uint32_t IdCount);
```

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *Ids* : List of Device zone IDs to remove
- [In] *IdCount* : Number of Device zones to remove

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetDeviceZoneAGEntranceLimit](#)
[BS2_GetAllDeviceZoneAGEntranceLimit](#)
[BS2_SetDeviceZoneAGEntranceLimit](#)
[BS2_RemoveAllDeviceZoneAGEntranceLimit](#)

From:
<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:
http://kb.supremainc.com/bs2sdk./doku.php?id=en:bs2_removedevicezoneagentrancelimit&rev=1504685328

Last update: **2017/09/06 17:08**