

Table of Contents

<i>BS2_SetAccessGroupEntranceLimit</i>	1
Supported devices	1
Declaration	1
Parameter	1
Return Value	1
See Also	1

BS2_SetAccessGroupEntranceLimit

Configures access group entrance limit.

Supported devices

BioStation 2 (1.5.0 only)
BioStatioin A2 (1.4.0 only)
BioEntry P2 (1.0.0 only)

Declaration

```
#include "BS_API.h"

int BS2_SetAccessGroupEntranceLimit(void* context, BS2_DEVICE_ID deviceId,
const BS2DeviceZoneAGEntranceLimit* agEntranceLimits, uint32_t
agEntranceLimitCount);
```

[See BS2DeviceZoneAGEntranceLimit Structure](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *agEntranceLimits* : Device zone access group entrance limit list
- [In] *agEntranceLimitCount* : Number of device zone access group entrance limit list

Return Value

If successfully done, `BS_SDK_SUCCESS` will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetAccessGroupEntranceLimit](#)
[BS2_GetAllAccessGroupEntranceLimit](#)
[BS2_RemoveAccessGroupEntranceLimit](#)

BS2_RemoveAllAccessGroupEntranceLimit

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk./doku.php?id=en:bs2_setaccessgroupentrancelimit&rev=1521683862

Last update: **2018/03/22 10:57**