

Table of Contents

BS2_SetDesFireCardConfigEx

Declaration

Paramter

Return Value

See Also

..... 1

..... 1

..... 1

..... 1

..... 1

[Configuration API](#) > [BS2_SetDesFireCardConfigEx](#)

BS2_SetDesFireCardConfigEx

[+ V2.6.4] Sets DesFire advanced configuration in the device.

Declaration

```
#include "BS_API.h"

int BS2_SetDesFireCardConfigEx(void* context, uint32_t deviceId,
BS2DesFireCardConfigEx* config);
```

[See BS2DesFireCardConfigEx Structure](#)

Paramter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *config* : Pointer of DesFire advanced configuration

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetDesFireCardConfigEx](#)

From:

<https://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_setdesfirecardconfigex

Last update: **2020/02/18 10:08**