

# Table of Contents

<b>BS2_SetDeviceZone</b> .....	1
Declaration .....	1
Parameter .....	1
Return Value .....	1
See Also .....	1

[Zone Control API](#) > [BS2\\_SetDeviceZone](#)

---

## BS2\_SetDeviceZone

Configures a Ethernet zone.

### Declaration

```
#include "BS_API.h"

int BS2_SetDeviceZone(void* context, BS2_DEVICE_ID deviceId, const
BS2DeviceZone* deviceZones, uint32_t deviceZoneCount);
```

[See BS2DeviceZone Structure](#)

### Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *deviceZones* : List of Device zones
- [In] *deviceZoneCount* : Number of Device zones

### Return Value

If successfully done, BS\_SDK\_SUCCESS will be returned.  
If there is an error, the corresponding error code will be returned.

### See Also

[BS2\\_GetDeviceZone](#)  
[BS2\\_GetAllDeviceZone](#)  
[BS2\\_RemoveDeviceZone](#)  
[BS2\\_RemoveAllDeviceZone](#)  
[BS2\\_SetDeviceZoneAlarm](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

[http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2\\_setdevicezone&rev=1504601752](http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_setdevicezone&rev=1504601752)

Last update: **2017/09/05 17:55**