

# Table of Contents

<b>BS2_SetLiftLockUnlockZoneAlarm</b> .....	1
Declaration .....	1
Parameter .....	1
Return Value .....	1
See Also .....	1

[Zone Control API](#) > [BS2\\_SetLiftLockUnlockZoneAlarm](#)

---

## BS2\_SetLiftLockUnlockZoneAlarm

[+ 2.7.0] Configures the alarm status of the Lift Lock/Unlock zone.

### Declaration

```
#include "BS_API.h"

int BS2_SetLiftLockUnlockZoneAlarm(void* context, uint32_t deviceId, uint8_t
alarmed, uint32_t* zoneIds, uint32_t zoneIdCount);
```

### Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *alarmed* : Whether the alarm has been triggered or not
- [In] *zoneIds* : List of Lift lock/unlock zone id
- [In] *zoneIdCount* : Number of Lift lock/unlock zone id list

### Return Value

If successfully done, BS\_SDK\_SUCCESS will be returned.

If there is an error, the corresponding error code will be returned.

### See Also

[BS2\\_GetLiftLockUnlockZone](#)

[BS2\\_GetAllLiftLockUnlockZone](#)

[BS2\\_GetLiftLockUnlockZoneStatus](#)

[BS2\\_GetAllLiftLockUnlockZoneStatus](#)

[BS2\\_SetLiftLockUnlockZone](#)

[BS2\\_RemoveLiftLockUnlockZone](#)

[BS2\\_RemoveAllLiftLockUnlockZone](#)

From:

<https://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

[https://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2\\_setliftlockunlockzonealarm](https://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_setliftlockunlockzonealarm)

Last update: **2020/07/29 11:30**

