

Table of Contents

BS2_SetRS485ConfigExDynamic	1
Declaration	1
Parameter	1
Return Value	1
See Also	1

[Configuration API](#) > [BS2_SetRS485ConfigExDynamic](#)

BS2_SetRS485ConfigExDynamic

[+ 2.9.9] Saves the RS485 network setting information for CoreStation.

Declaration

```
#include "BS_API.h"

int BS2_SetRS485ConfigExDynamic(void* context, uint32_t deviceId,
BS2Rs485ConfigEXDynamic* config);
```

Supported Devices: CoreStation 20(CS-20, CS-20P), Door Interface(DI-24)

[See BS2Rs485ConfigEXDynamic Structure](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device Identifier
- [Out] *config* : Pointer to store RS485 network setting information

Return Value

If successfully done, BS_SDK_SUCCESS will be returned. If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetRS485ConfigExDynamic](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk./doku.php?id=en:bs2_setrs485configexdynamic

Last update: **2025/06/12 10:23**