

BS2_RemoveDeviceZoneAGEntranceLimit 1

..... 1

..... 1

..... 1

..... 1

..... 1

[Zone Control API](#) > [BS2_RemoveDeviceZoneAGEntranceLimit](#)

BS2_RemoveDeviceZoneAGEntranceLimit

Ethernet Access Group

BioStation 2 (1.5.0 only)
BioStation A2 (1.4.0 only)
BioEntry P2 (1.0.0 only)

```
#include "BS_API.h"

int BS2_RemoveDeviceZoneAGEntranceLimit(void* context, BS2_DEVICE_ID
deviceId, const BS2_ZONE_ID* Ids, uint32_t IdCount);
```

- [In] *context* : Context
- [In] *deviceId* :
- [In] *Ids* : device zone id
- [In] *IdCount* : device zone id

BS_SDK_SUCCESS , 가

[BS2_GetDeviceZoneAGEntranceLimit](#)
[BS2_GetAllDeviceZoneAGEntranceLimit](#)
[BS2_SetDeviceZoneAGEntranceLimit](#)
[BS2_RemoveAllDeviceZoneAGEntranceLimit](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk./doku.php?id=ko:bs2_removedevicezoneagentrancelimit

Last update: **2018/03/22 10:52**