

**BS2\_SetIntrusionAlarmZoneArm** ..... 1  
..... 1  
..... 1  
..... 1  
..... 1  
..... 1

[Zone Control API](#) > [BS2\\_SetIntrusionAlarmZoneAlarm](#)

---

## BS2\_SetIntrusionAlarmZoneArm

/ .

BioStation 2 (1.5.0 only)  
BioStatioin A2 (1.4.0 only)  
BioEntry P2 (1.0.0 only)

```
#include "BS_API.h"
```

```
int BS2_SetIntrusionAlarmZoneArm(void* context, uint32_t deviceId, uint8_t  
armed, uint32_t* zoneIds, uint32_t zoneIdCount);
```

- [In] *context* : Context
- [In] *deviceId* :
- [In] *armed* :
- [In] *zoneIds* : intrusion alarm zone id
- [In] *zoneIdCount* : intrusion alarm zone id

BS\_SDK\_SUCCESS , 가

[BS2\\_GetIntrusionAlarmZone](#)  
[BS2\\_GetIntrusionAlarmZoneStatus](#)  
[BS2\\_GetAllIntrusionAlarmZoneStatus](#)  
[BS2\\_SetIntrusionAlarmZone](#)  
[BS2\\_SetIntrusionAlarmZoneAlarm](#)  
[BS2\\_RemoveIntrusionAlarmZone](#)  
[BS2\\_RemoveAllIntrusionAlarmZone](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

[http://kb.supremainc.com/bs2sdk./doku.php?id=ko:bs2\\_setintrusionalarmzonearm](http://kb.supremainc.com/bs2sdk./doku.php?id=ko:bs2_setintrusionalarmzonearm)

Last update: **2018/03/22 10:50**