

Table of Contents

<i>BS2_RunAction</i>	1
Declaration	1
Parameters	1
Return Values	1

Device API > BS2_RunAction

BS2_RunAction

[+ 2.8.1] Commands the device to take certain actions.

Using this API, you can control LED, buzzer, sound, relay and more.

Declaration

```
#include "BS_API.h"

int BS2_RunAction(void* context, uint32_t deviceId, const BS2Action*
action);
```

BS2Action Structure

Parameters

- [In] *context* : Context
- [In] *deviceId* : Device Identifier
- [In] *action* : Structure address where certain actions are defined

Return Values

Return BS_SDK_SUCCESS when successful, and return an appropriate error code when an error occurs.

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_runaction

Last update: **2021/08/06 15:50**