

BS2_GetDesFireCardConfigEx 1

..... 1

..... 1

..... 1

..... 1

BS2_GetDesFireCardConfigEx

[+ V2.6.4] DesFire 가 .

```
#include "BS_API.h"

int BS2_GetDesFireCardConfigEx(void* context, uint32_t deviceId,
BS2DesFireCardConfigEx* config);
```

BS2DesFireCardConfigEx

- [In] *context* : Context
- [In] *deviceId* :
- [Out] *config* : DesFire

BS_SDK_SUCCESS , 가

BS2_SetDesFireCardConfigEx

From: <http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link: http://kb.supremainc.com/bs2sdk./doku.php?id=ko:bs2_getdesfirecardconfigex

Last update: **2020/03/03 11:33**