

BS2_GetDeviceZoneMasterConfig 1
..... 1
..... 1
..... 1
..... 1
..... 1

BS2_GetDeviceZoneMasterConfig

Ethernet master 가 .

BioStation 2 (1.5.0 only)
BioStation A2 (1.4.0 only)
BioEntry P2 (1.0.0 only)

```
#include "BS_API.h"

 
int BS2_GetDeviceZoneMasterConfig(void* context, BS2_DEVICE_ID deviceId,
BS2DeviceZoneMasterConfig* config);
```

[BS2DeviceZoneMasterConfig](#)

- [In] *context* : Context
- [In] *deviceId* :
- [Out] *config* : zone master

BS_SDK_SUCCESS , 가

[BS2_SetDeviceZoneMasterConfig](#)
[BS2_RemoveDeviceZoneMasterConfig](#)



From:

<https://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

https://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2_getdevicezonemasterconfig

Last update: **2021/01/06 14:57**