

Table of Contents

BS2_GetAllAccessGroupEntranceLimit 1

 Supported devices 1

 Declaration 1

 Parameter 1

 Return Value 1

 See Also 2

BS2_GetAllAccessGroupEntranceLimit

Retrieves all access group entrance limit.

Supported devices

BioStation 2 (1.5.0 only)

BioStation A2 (1.4.0 only)

BioEntry P2 (1.0.0 only)

Declaration

```
#include "BS_API.h"

int BS2_GetAllAccessGroupEntranceLimit(void* context, BS2_DEVICE_ID
deviceId, BS2DeviceZoneAGEntranceLimit** agEntranceLimitObj, uint32_t*
numAGEntranceLimit);
```

[See BS2DeviceZoneAGEntranceLimit Structure](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [Out] *agEntranceLimitObj* : Device zone access group entrance limit pointer
- [Out] *numAGEntranceLimit* : Number of device zone access group entrance limit list

NOTE

The zoneObj variable needs to return the memory to the system by the [BS2_ReleaseObject](#) function after being used.

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.

If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetAccessGroupEntranceLimit](#)
[BS2_SetAccessGroupEntranceLimit](#)
[BS2_RemoveAccessGroupEntranceLimit](#)
[BS2_RemoveAllAccessGroupEntranceLimit](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_getallaccessgroupentrancelimit&rev=1521683870

Last update: **2018/03/22 10:57**