

Table of Contents

BS2_GetAllDeviceZoneAGEntranceLimit	1
Supported devices	1
Declaration	1
Parameter	1
Return Value	1
See Also	2

[Zone Control API](#) > [BS2_GetAllDeviceZoneAGEntranceLimit](#)

BS2_GetAllDeviceZoneAGEntranceLimit

Retrieves all Ethernet Access Group Entrance limit.

Supported devices

BioStation 2 (1.5.0 only)
BioStatioin A2 (1.4.0 only)
BioEntry P2 (1.0.0 only)

Declaration

```
#include "BS_API.h"

int BS2_GetAllDeviceZoneAGEntranceLimit(vvoid* context, BS2_DEVICE_ID
deviceId, BS2DeviceZoneAGEntranceLimit** deviceZoneAGEntranceLimitObj,
uint32_t* numDeviceZoneAGEntranceLimit);
```

[See BS2DeviceZoneAGEntranceLimit Structure](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [Out] *deviceZoneAGEntranceLimitObj* : Device zone Access Group entrance limit pointer
- [Out] *numDeviceZoneAGEntranceLimit* : Number of device zone Access Group entrance

NOTE

The *zoneObj* variable needs to return the memory to the system by the [BS2_ReleaseObject](#) function after being used.

Return Value

If successfully done, `BS_SDK_SUCCESS` will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetDeviceZoneAGEntranceLimit](#)
[BS2_SetDeviceZoneAGEntranceLimit](#)
[BS2_RemoveDeviceZoneAGEntranceLimit](#)
[BS2_RemoveAllDeviceZoneAGEntranceLimit](#)

From:

<https://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/bs2sdk./doku.php?id=en:bs2_getalldevicezoneagentrancelimit

Last update: **2018/03/22 10:57**