

Table of Contents

BS2_GetAllDeviceZoneAGEntranceLimit	1
Declaration	1
Parameter	1
Return Value	1
See Also	1

[Zone Control API](#) > [BS2_GetAllDeviceZoneAGEntranceLimit](#)

BS2_GetAllDeviceZoneAGEntranceLimit

Retrieves all Ethernet Access Group Entrance limit.

Declaration

```
#include "BS_API.h"

int BS2_GetAllDeviceZoneAGEntranceLimit(vvoid* context, BS2_DEVICE_ID
deviceId, BS2DeviceZoneAGEntranceLimit** deviceZoneAGEntranceLimitObj,
uint32_t* numDeviceZoneAGEntranceLimit);
```

[See BS2DeviceZoneAGEntranceLimit Structure](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [Out] *deviceZoneAGEntranceLimitObj* : Device zone Access Group entrance limit pointer
- [Out] *numDeviceZoneAGEntranceLimit* : Number of device zone Access Group entrance

NOTE

The *zoneObj* variable needs to return the memory to the system by the [BS2_ReleaseObject](#) function after being used.

Return Value

If successfully done, `BS_SDK_SUCCESS` will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetDeviceZoneAGEntranceLimit](#)
[BS2_SetDeviceZoneAGEntranceLimit](#)
[BS2_RemoveDeviceZoneAGEntranceLimit](#)

BS2_RemoveAllDeviceZoneAGEntranceLimit

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_getalldevicezoneagentrancelimit&rev=1504685067

Last update: **2017/09/06 17:04**