

Table of Contents

BS2_GetDeviceZoneAGEntranceLimit	1
Supported devices	1
Declaration	1
Parameter	1
Return Value	2
See Also	2

[Zone Control API](#) > [BS2_GetDeviceZoneAGEntranceLimit](#)

BS2_GetDeviceZoneAGEntranceLimit

Retrieves selected Ethernet Access Group Entrance limit.

Supported devices

BioStation 2 (1.5.0 only)
BioStatioin A2 (1.4.0 only)
BioEntry P2 (1.0.0 only)

Declaration

```
#include "BS_API.h"

int BS2_GetDeviceZoneAGEntranceLimit(void* context, BS2_DEVICE_ID deviceId,
const BS2_ZONE_ID* Ids, uint32_t IdCount, BS2DeviceZoneAGEntranceLimit**
deviceZoneAGEntranceLimitObj, uint32_t* numDeviceZoneAGEntranceLimit);
```

[See BS2DeviceZoneAGEntranceLimit Structure](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *Ids* : List of device zone entrance limit IDs to retrieve
- [In] *IdCount* : Size of Device zone entrance limit IDs list
- [Out] *deviceZoneAGEntranceLimitObj* : Device zone Access Group entrance limit pointer
- [Out] *numDeviceZoneAGEntranceLimit* : Number of device zone Access Group entrance

limit list

NOTE

The zoneObj variable needs to return the memory to the system by the [BS2_ReleaseObject](#) function after being used.

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.

If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetAllDeviceZoneAGEntranceLimit](#)

[BS2_SetDeviceZoneAGEntranceLimit](#)

[BS2_RemoveDeviceZoneAGEntranceLimit](#)

[BS2_RemoveAllDeviceZoneAGEntranceLimit](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_getdevicezoneagentrancelimit

Last update: **2018/11/14 08:53**