

# Table of Contents

<b>BS2_GetAccessGroupEntranceLimit</b> .....	1
Declaration .....	1
Parameter .....	1
Return Value .....	1
See Also .....	2

[Zone Control API](#) > [BS2\\_GetAccessGroupEntranceLimit](#)

---

## BS2\_GetAccessGroupEntranceLimit

Retrieves selected Ethernet Access Group Entrance limit.

### Declaration

```
#include "BS_API.h"

int BS2_GetDeviceZoneAGEntranceLimit:(void* context, BS2_DEVICE_ID deviceId,
const BS2_ZONE_ID* Ids, uint32_t IdCount, BS2DeviceZoneAGEntranceLimit**
deviceZoneAGEntranceLimitObj, uint32_t* numDeviceZoneAGEntranceLimit);
```

[See BS2DeviceZoneAGEntranceLimit Structure](#)

### Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *Ids* : List of device zone entrance limit IDs to retrieve
- [In] *IdCount* : Size of Device zone entrance limit IDs list
- [Out] *deviceZoneAGEntranceLimitObj* : Device zone Access Group entrance limit pointer
- [Out] *numDeviceZoneAGEntranceLimit* : Number of device zone Access Group entrance

limit list

#### NOTE

The *zoneObj* variable needs to return the memory to the system by the [BS2\\_ReleaseObject](#) function after being used.

### Return Value

If successfully done, `BS_SDK_SUCCESS` will be returned.  
If there is an error, the corresponding error code will be returned.

## See Also

[BS2\\_GetAllDeviceZoneAGEntranceLimit](#)

[BS2\\_SetDeviceZoneAGEntranceLimit](#)

[BS2\\_RemoveDeviceZoneAGEntranceLimit](#)

[BS2\\_RemoveAllDeviceZoneAGEntranceLimit](#)

From:

<https://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

[https://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2\\_getdevicezoneagentrancelimit&rev=1504685034](https://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_getdevicezoneagentrancelimit&rev=1504685034)

Last update: **2017/09/06 17:03**