

# Table of Contents

<b>BS2_GetLiftLockUnlockZoneStatus</b> .....	1
Declartion .....	1
Parameter .....	1
Return Value .....	1
함께 보기 .....	2

 **Fix Me!** This page is not fully translated, yet. Please help completing the translation.  
(remove this paragraph once the translation is finished)

[Zone Control API](#) > [BS2\\_GetLiftLockUnlockZoneStatus](#)

## BS2\_GetLiftLockUnlockZoneStatus

[+ 2.7.0] Retrieves the status of selected Lift Lock/Unlock zones.

### Declartion

```
#include "BS_API.h"

int BS2_GetLiftLockUnlockZoneStatus(void* context, uint32_t deviceId,
uint32_t* zoneIds, uint32_t zoneIdCount, BS2ZoneStatus** zoneStatusObj,
uint32_t* numZoneStatus);
```

[See BS2ZoneStatus Structure](#)

### Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *zoneIds* : List of Lift lock/unlock zone ID
- [In] *zoneIdCount* : Size of Lift lock/unlock zone id list
- [Out] *zoneStatusObj* : Zone status list pointer
- [Out] *numZoneStatus* : Number of zone status list

#### NOTE

The *zoneStatusObj* variable needs to return the memory to the system by the [BS2\\_ReleaseObject](#) function after being used.

### Return Value

If successfully done, `BS_SDK_SUCCESS` will be returned.  
If there is an error, the corresponding error code will be returned.

## 함께 보기

[BS2\\_GetLiftLockUnlockZone](#)  
[BS2\\_GetAllLiftLockUnlockZone](#)  
[BS2\\_GetAllLiftLockUnlockZoneStatus](#)  
[BS2\\_SetLiftLockUnlockZone](#)  
[BS2\\_SetLiftLockUnlockZoneAlarm](#)  
[BS2\\_RemoveLiftLockUnlockZone](#)  
[BS2\\_RemoveAllLiftLockUnlockZone](#)

From:

<https://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

[https://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2\\_getliftlockunlockzonestatus&rev=1595989284](https://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_getliftlockunlockzonestatus&rev=1595989284)

Last update: **2020/07/29 11:21**