

Table of Contents

<i>BS2_RemoveDeviceZoneMasterConfig</i>	1
Supported devices	1
Declaration	1
Parameter	1
Return Value	1
See Also	1

Zone Control API > [BS2_RemoveDeviceZoneMasterConfig](#)

BS2_RemoveDeviceZoneMasterConfig

Removes the zone master config of the Ethernet zone.

Supported devices

BioStation 2 (1.5.0 only)

BioStation A2 (1.4.0 only)

BioEntry P2 (1.0.0 only)

Declaration

```
#include "BS_API.h"

int BS2_RemoveDeviceZoneMasterConfig(void* context, BS2_DEVICE_ID deviceId);
```

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.

If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetDeviceZoneMasterConfig](#)

[BS2_SetDeviceZoneMasterConfig](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_removedevicezonemasterconfig

Last update: **2021/01/06 15:09**