

# Table of Contents

<b>BS2_SetDeviceZoneAGEntranceLimit</b> .....	1
Supported devices .....	1
Declaration .....	1
Parameter .....	1
Return Value .....	1
See Also .....	2

## BS2\_SetDeviceZoneAGEntranceLimit

Configures Ethernet access group entrance limit.

### Supported devices

BioStation 2 (1.5.0 only)

BioStation A2 (1.4.0 only)

BioEntry P2 (1.0.0 only)

BioEntry W2 (1.2.0 only)

BioStation L2 (1.3.0 only)

FaceLite (1.0.0 or higher version) FaceStation 2 (1.0.0 or higher version) BioLite N2(1.0.0 or higher version) X-Station 2(1.0.0 or higher version) FaceStation F2(1.0.0 or higher version) CoreStation(1.0.0 or higher version) XPass 2(1.0.0 or higher version)

### Declaration

```
#include "BS_API.h"

int BS2_SetDeviceZoneAGEntranceLimit(void* context, BS2_DEVICE_ID deviceId,
const BS2DeviceZoneAGEntranceLimit* deviceZoneAGEntranceLimits, uint32_t
deviceZoneAGEntranceLimitCount);
```

[See BS2DeviceZoneAGEntranceLimit Structure](#)

### Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *deviceZoneAGEntranceLimits* : Device zone access group entrance limit list
- [In] *deviceZoneAGEntranceLimitCount* : Number of device zone access group

### Return Value

If successfully done, BS\_SDK\_SUCCESS will be returned.

If there is an error, the corresponding error code will be returned.

## See Also

[BS2\\_GetDeviceZoneAGEntranceLimit](#)  
[BS2\\_GetAllDeviceZoneAGEntranceLimit](#)  
[BS2\\_RemoveDeviceZoneAGEntranceLimit](#)  
[BS2\\_RemoveAllDeviceZoneAGEntranceLimit](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

[http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2\\_setdevicezoneagentrancelimit&rev=1658985536](http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_setdevicezoneagentrancelimit&rev=1658985536)

Last update: **2022/07/28 14:18**