

Table of Contents

| | |
|---|---|
| BS2_SetDeviceZoneAGEntranceLimit | 1 |
| Supported devices | 1 |
| Declaration | 1 |
| Parameter | 1 |
| Return Value | 1 |
| See Also | 2 |

BS2_SetDeviceZoneAGEntranceLimit

Configures Ethernet access group entrance limit.

Supported devices

BioStation 2 (1.5.0 only)
BioStation A2 (1.4.0 only)
BioEntry P2 (1.0.0 only)
BioEntry W2 (1.2.0 only)
BioStation L2 (1.3.0 only)
FaceLite (1.0.0 or higher version)
FaceStation 2 (1.0.0 or higher version)
BioLite N2(1.0.0 or higher version)
X-Station 2(1.0.0 or higher version)
FaceStation F2(1.0.0 or higher version)
CoreStation(1.0.0 or higher version)
XPass 2(1.0.0 or higher version)

Declaration

```
#include "BS_API.h"

int BS2_SetDeviceZoneAGEntranceLimit(void* context, BS2_DEVICE_ID deviceId,
const BS2DeviceZoneAGEntranceLimit* deviceZoneAGEntranceLimits, uint32_t
deviceZoneAGEntranceLimitCount);
```

[See BS2DeviceZoneAGEntranceLimit Structure](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *deviceZoneAGEntranceLimits* : Device zone access group entrance limit list
- [In] *deviceZoneAGEntranceLimitCount* : Number of device zone access group

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetDeviceZoneAGEntranceLimit](#)
[BS2_GetAllDeviceZoneAGEntranceLimit](#)
[BS2_RemoveDeviceZoneAGEntranceLimit](#)
[BS2_RemoveAllDeviceZoneAGEntranceLimit](#)

From:
<https://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:
https://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_setdevicezoneagentrancelimit&rev=1658985563

Last update: **2022/07/28 14:19**