

Table of Contents

BS2_SetDeviceZoneAGEntranceLimit

Supported devices

Declaration

Parameter

Return Value

See Also

.....

.....

.....

.....

.....

.....

1

1

1

1

1

1

BS2_SetDeviceZoneAGEntranceLimit

Configures Ethernet access group entrance limit.

Supported devices

BioStation 2 (1.5.0 only)
BioStation A2 (1.4.0 only)
BioEntry P2 (1.0.0 only)
BioEntry W2 (1.2.0 only)
BioStation L2 (1.3.0 only)

Declaration

```
#include "BS_API.h"

int BS2_SetDeviceZoneAGEntranceLimit(void* context, BS2_DEVICE_ID deviceId,
const BS2DeviceZoneAGEntranceLimit* deviceZoneAGEntranceLimits, uint32_t
deviceZoneAGEntranceLimitCount);
```

[See BS2DeviceZoneAGEntranceLimit Structure](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *deviceZoneAGEntranceLimits* : Device zone access group entrance limit list
- [In] *deviceZoneAGEntranceLimitCount* : Number of device zone access group

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetDeviceZoneAGEntranceLimit](#)

[BS2_GetAllDeviceZoneAGEntranceLimit](#)
[BS2_RemoveDeviceZoneAGEntranceLimit](#)
[BS2_RemoveAllDeviceZoneAGEntranceLimit](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_setdevicezoneagentrancelimit&rev=1658987836

Last update: **2022/07/28 14:57**