

**BS2\_GetAllDeviceZoneAGEntranceLimit** ..... 1

..... 1

..... 1

..... 1

..... 1

..... 2

# BS2\_GetAllDeviceZoneAGEntranceLimit

Ethernet Access Group 가 .

BioStation 2 (1.5.0 only)  
BioStation A2 (1.4.0 only)  
BioEntry P2 (1.0.0 only)

```
#include "BS_API.h"

int BS2_GetAllDeviceZoneAGEntranceLimit(vvoid* context, BS2_DEVICE_ID
deviceId, BS2DeviceZoneAGEntranceLimit** deviceZoneAGEntranceLimitObj,
uint32_t* numDeviceZoneAGEntranceLimit);
```

BS2DeviceZoneAGEntranceLimit

- [In] *context* : Context
- [In] *deviceId* :
- [Out] *deviceZoneAGEntranceLimitObj* : device zone Access Group
- [Out] *numDeviceZoneAGEntranceLimit* : device zone Access Group



BS\_SDK\_SUCCESS , 가

[BS2\\_GetDeviceZoneAGEntranceLimit](#)  
[BS2\\_SetDeviceZoneAGEntranceLimit](#)  
[BS2\\_RemoveDeviceZoneAGEntranceLimit](#)  
[BS2\\_RemoveAllDeviceZoneAGEntranceLimit](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

[http://kb.supremainc.com/bs2sdk./doku.php?id=ko:bs2\\_getalldevicezoneagentrancelimit](http://kb.supremainc.com/bs2sdk./doku.php?id=ko:bs2_getalldevicezoneagentrancelimit)

Last update: **2018/03/22 10:52**