

**BS2\_GetAllIntrusionAlarmZoneStatus** ..... 1  
..... 1  
..... 1  
..... 1  
..... 1

## BS2\_GetAllIntrusionAlarmZoneStatus

가 .

```
#include "BS_API.h"

int BS2_GetAllIntrusionAlarmZoneStatus(void* context, uint32_t deviceId,
uint32_t* zoneIds, uint32_t zoneIdCount, BS2ZoneStatus** zoneStatusObj,
uint32_t* numZoneStatus);
```

### BS2ZoneStatus

- [In] *context* : Context
- [In] *deviceId* :
- [In] *zoneIds* : 가 id
- [In] *zoneIdCount* : id
- [Out] *zoneStatusObj* : zone status
- [Out] *numZoneStatus* : zone status

zoneStatusObj      [BS2\\_ReleaseObject](#)

BS\_SDK\_SUCCESS , 가

[BS2\\_GetIntrusionAlarmZone](#)  
[BS2\\_GetIntrusionAlarmZoneStatus](#)

[BS2\\_SetIntrusionAlarmZone](#)  
[BS2\\_SetIntrusionAlarmZoneAlarm](#)  
[BS2\\_RemoveIntrusionAlarmZone](#)  
[BS2\\_RemoveAllIntrusionAlarmZone](#)  
[BS2\\_SetIntrusionAlarmZoneArm](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

[http://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2\\_getallintrusionalarmzonestatus&rev=1520397075](http://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2_getallintrusionalarmzonestatus&rev=1520397075)

Last update: **2018/03/07 13:31**