

| | | |
|-----------------------------------|-------|---|
| BS2_GetDesFireCardConfigEx | | 1 |
| | | 1 |
| | | 1 |
| | | 1 |
| | | 1 |
| | | 1 |

Configuration API > [BS2_GetDesFireCardConfigEx](#)

BS2_GetDesFireCardConfigEx

[+ V2.6.4] DesFire 가 .

```
#include "BS_API.h"

int BS2_GetDesFireCardConfigEx(void* context, uint32_t deviceId,
BS2DesFireCardConfigEx* config);
```

[BS2DesFireCardConfigEx](#)

- [In] *context* : Context
- [In] *deviceId* :
- [Out] *config* : DesFire

BS_SDK_SUCCESS , 가 .

[BS2_SetDesFireCardConfigEx](#)

From:

<https://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

https://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2_getdesfirecardconfigex&rev=1581925744

Last update: **2020/02/17 16:49**