

BS2_GetAccessGroupEntranceLimit 1

..... 1

..... 1

..... 1

..... 1

..... 2

BS2_GetAccessGroupEntranceLimit

Ethernet Access Group

가

BioStation 2 (1.5.0 only)
BioStation A2 (1.4.0 only)
BioEntry P2 (1.0.0 only)

```
#include "BS_API.h"
```

```
int BS2_GetDeviceZoneAGEntranceLimit:(void* context, BS2_DEVICE_ID deviceId,  
const BS2_ZONE_ID* Ids, uint32_t IdCount, BS2DeviceZoneAGEntranceLimit**  
deviceZoneAGEntranceLimitObj, uint32_t* numDeviceZoneAGEntranceLimit);
```

[BS2DeviceZoneAGEntranceLimit](#)

- [In] *context* : Context
- [In] *deviceId* :
- [In] *Ids* : 가 device zone id
- [In] *IdCount* : device zone id
- [Out] *deviceZoneAGEntranceLimitObj* : device zone Access Group
- [Out] *numDeviceZoneAGEntranceLimit* : device zone Access Group

zoneObj

[BS2_ReleaseObject](#)

BS_SDK_SUCCESS , 가

[BS2_GetAllDeviceZoneAGEntranceLimit](#)
[BS2_SetDeviceZoneAGEntranceLimit](#)
[BS2_RemoveDeviceZoneAGEntranceLimit](#)
[BS2_RemoveAllDeviceZoneAGEntranceLimit](#)

From:

<https://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/bs2sdk./doku.php?id=ko:bs2_getdevicezoneagentrancelimit&rev=1521683560

Last update: **2018/03/22 10:52**