

**BS2\_GetDeviceZoneMasterConfig** ..... 1  
    ..... 1  
    ..... 1  
    ..... 1  
    ..... 1  
    ..... 1

# BS2\_GetDeviceZoneMasterConfig

Ethernet      master      가      .

BioStation 2 (1.5.0 only)  
BioStation A2 (1.4.0 only)  
BioEntry P2 (1.0.0 only)

```
#include "BS_API.h"

 
int BS2_GetDeviceZoneMasterConfig(void* context, BS2_DEVICE_ID deviceId,
BS2DeviceZoneMasterConfig* config);
```

[BS2DeviceZoneMasterConfig](#)

- [In] *context* : Context
- [In] *deviceId* :
- [Out] *config* : zone master

BS\_SDK\_SUCCESS ,      가

[BS2\\_SetDeviceZoneMasterConfig](#)  
[BS2\\_RemoveDeviceZoneMasterConfig](#)



From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

[http://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2\\_getdevicezonemasterconfig](http://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2_getdevicezonemasterconfig)

Last update: **2021/01/06 14:57**