

**BS2\_GetRS485ConfigEx** ..... 1  
..... 1  
..... 1  
..... 1

# BS2\_GetRS485ConfigEx

Corestation RS485 가 .

```
#include "BS_API.h"

int BS2_GetRS485ConfigEx(void* context, uint32_t deviceId, BS2Rs485ConfigEX* config);
```

BS2Rs485ConfigEX

- [In] *context* : Context
- [In] *deviceId* :
- [Out] *config* : RS485

BS\_SDK\_SUCCESS , 가

From: <http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link: [http://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2\\_getrs485configex&rev=1503964888](http://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2_getrs485configex&rev=1503964888)

Last update: **2017/08/29 09:01**