

BS2_GetRS485ConfigExDynamic 1
..... 1
..... 1
..... 1
..... 1

BS2_GetRS485ConfigExDynamic

[+ 2.9.9] CoreStation RS485 가 .

```
#include "BS_API.h"
```

```
int BS2_GetRS485ConfigExDynamic(void* context, uint32_t deviceId,
BS2Rs485ConfigEXDynamic* config);
```

: CoreStation 20(CS-20, CS-20P), Door Interface(DI-24)

BS2Rs485ConfigEXDynamic

- [In] *context* : Context
- [In] *deviceId* :
- [Out] *config* : RS485

BS_SDK_SUCCESS , 가

BS2_SetRS485ConfigExDynamic

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2_getrs485configexdynamic

Last update: **2025/06/11 15:03**