

BS2_GetScheduledLockUnlockZoneStatus 1
..... 1
..... 1
..... 1
..... 1

BS2_GetScheduledLockUnlockZoneStatus

/ 가 .

```
#include "BS_API.h"

int BS2_GetScheduledLockUnlockZoneStatus(void* context, uint32_t deviceId,
uint32_t* zoneIds, uint32_t zoneIdCount, BS2ZoneStatus** zoneStatusObj,
uint32_t* numZoneStatus);
```

BS2ZoneStatus

- [In] *context* : Context
- [In] *deviceId* :
- [In] *zoneIds* : 가 scheduled lock/unlock zone id
- [In] *zoneIdCount* : scheduled lock/unlock zone id
- [Out] *zoneStatusObj* : zone status
- [Out] *numZoneStatus* : zone status



BS_SDK_SUCCESS , 가

BS2_GetScheduledLockUnlockZone
BS2_GetAllScheduledLockUnlockZone

[BS2_GetAllScheduledLockUnlockZoneStatus](#)
[BS2_SetScheduledLockUnlockZone](#)
[BS2_SetScheduledLockUnlockZoneAlarm](#)
[BS2_RemoveScheduledLockUnlockZone](#)
[BS2_RemoveAllScheduledLockUnlockZone](#)

From:

<https://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2_getscheduledlockunlockzonestatus

Last update: **2016/07/12 10:16**