

BS2_GetUserDatasExFromDir	1
.....	1
.....	1
.....	1
.....	1

[USB Exported Control API](#) > [BS2_GetUserDatasExFromDir](#)

BS2_GetUserDatasExFromDir

Usb Data 가 .

```
#include "BS_API.h"

int BS2_GetUserDatasExFromDir(void* context, const char* szDir, char* uids,
uint32_t uidCount, BS2UserBlobEx* userBlob, BS2_USER_MASK userMask);
```

BS2UserBlobEx

- [In] *context* : Context
- [In] *szDir* : Data
- [In] *uids* : 가
- [In] *uidCount* :
- [Out] *userBlob* :
- [In] *userMask* : Mask

BS_SDK_SUCCESS , 가

[BS2_AllocateUsbContext](#)
[BS2_ReleaseUsbContext](#)
[BS2_GetUserDatabaseInfoFromDir](#)
[BS2_GetUserListFromDir](#)
[BS2_GetUserInfosFromDir](#)
[BS2_GetUserDatasFromDir](#)
[BS2_GetUserInfosExFromDir](#)
[BS2_GetLogFromDir](#)
[BS2_GetLogBlobFromDir](#)

BS2_GetFilteredLogFromDir

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2_getuserdatasexfromdir&rev=1540863718

Last update: **2018/10/30 10:41**