

BS2_GetUserInfosExFromDir

.....

1

.....

1

.....

1

.....

1

.....

1

[USB Exported Control API](#) > [BS2_GetUserInfosExFromDir](#)

BS2_GetUserInfosExFromDir

[+ 2.5.0] Usb

Data

가

.

```
#include "BS_API.h"
```

```
int BS2_GetUserInfosExFromDir(void* context, const char* szDir, char* uids,
uint32_t uidCount, BS2UserBlobEx* userBlob);
```

BS2UserBlobEx

- [In] *context* : Context
- [In] *szDir* : Data
- [In] *uids* : 가
- [In] *uidCount* :
- [Out] *userBlob* :

BS_SDK_SUCCESS

, 가

.

[BS2_AllocateUsbContext](#)
[BS2_ReleaseUsbContext](#)
[BS2_GetUserDatabaseInfoFromDir](#)
[BS2_GetUserListFromDir](#)
[BS2_GetUserInfosFromDir](#)
[BS2_GetUserDatasFromDir](#)
[BS2_GetUserDatasExFromDir](#)
[BS2_GetLogFromDir](#)
[BS2_GetLogBlobFromDir](#)
[BS2_GetFilteredLogFromDir](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2_getuserinfosexfromdir&rev=1540884074

Last update: **2018/10/30 16:21**