

BS2_GetUserListFromDir

.....

.....

.....

.....

.....

.....

1

1

1

1

1

[USB Exported Control API](#) > [BS2_GetUserListFromDir](#)

BS2_GetUserListFromDir

Usb Data 가 .

```
#include "BS_API.h"

int BS2_GetUserListFromDir(void* context, const char* szDir, char** uidsObj,
uint32_t* numUid, IsAcceptableUserID ptrIsAcceptableUserID);
```

- [In] *context* : Context
- [Out] *szDir* : Data
- [Out] *uidsObj* :
- [Out] *numUid* :
- [In] *ptrIsAcceptableUserID* : TBD

uidsObj [BS2_ReleaseObject](#)

BS_SDK_SUCCESS , 가

[BS2_AllocateUsbContext](#)
[BS2_ReleaseUsbContext](#)
[BS2_GetUserDatabaseInfoFromDir](#)
[BS2_GetUserInfosFromDir](#)
[BS2_GetUserDatasFromDir](#)
[BS2_GetUserInfosExFromDir](#)
[BS2_GetUserDatasExFromDir](#)
[BS2_GetLogFromDir](#)
[BS2_GetLogBlobFromDir](#)

BS2_GetFilteredLogFromDir

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2_getuserlistfromdir&rev=1540863584

Last update: **2018/10/30 10:39**