

**BS2\_SetDeviceZoneAlarm** ..... 1

..... 1

..... 1

..... 1

..... 1

## BS2\_SetDeviceZoneAlarm

Ethernet

```
#include "BS_API.h"

int BS2_SetDeviceZoneAlarm(void* context, BS2_DEVICE_ID deviceId, uint8_t
alarmed, BS2_ZONE_ID* zoneIds, uint32_t zoneIdCount);
```

- [In] *context* : Context
- [In] *deviceId* :
- [In] *alarmed* :
- [In] *zoneIds* : device zone id
- [In] *zoneIdCount* : device zone id

BS\_SDK\_SUCCESS , 가

- [BS2\\_GetDeviceZone](#)
- [BS2\\_GetAllDeviceZone](#)
- [BS2\\_SetDeviceZone](#)
- [BS2\\_RemoveDeviceZone](#)
- [BS2\\_RemoveIntrusionAlarmZone](#)
- [BS2\\_RemoveAllDeviceZone](#)

From:  
<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:  
[http://kb.supremainc.com/bs2sdk./doku.php?id=ko:bs2\\_setdevicezonealarm&rev=1504534026](http://kb.supremainc.com/bs2sdk./doku.php?id=ko:bs2_setdevicezonealarm&rev=1504534026)

Last update: **2017/09/04 23:07**