

**BS2\_SetRS485ConfigExDynamic** ..... 1

..... 1

..... 1

..... 1

..... 1

## BS2\_SetRS485ConfigExDynamic

[+ 2.9.9] CoreStation          RS485          .

```
#include "BS_API.h"  
  
int BS2_SetRS485ConfigExDynamic(void* context, uint32_t deviceId,  
BS2Rs485ConfigEXDynamic* config);
```

: CoreStation 20(CS-20, CS-20P), Door Interface(DI-24)

[BS2Rs485ConfigEXDynamic](#)

- [In] *context* : Context
- [In] *deviceId* :
- [Out] *config* : RS485

BS\_SDK\_SUCCESS , 가

[BS2\\_GetRS485ConfigExDynamic](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

[http://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2\\_setrs485configexdynamic](http://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2_setrs485configexdynamic)

Last update: **2025/06/11 15:06**