

Communication API 1

..... 1

Communication API

API

LAN, USB, RS485

BS2_SetDeviceEventListener

- **BS2_SetDeviceEventListener**: Event listener
- **BS2_SearchDevices**: Subnet
- **BS2_SearchDevicesEx**: IP
- **BS2_GetDevices**: 가
- **BS2_ConnectDevice**:
- **BS2_ConnectDeviceViaIP**: IP Port
- **BS2_DisconnectDevice**:
- **BS2_SetKeepAliveTimeout**: Keep-alive timeout
- **BS2_SetNotificationListener**: Notification listener
- **BS2_SetServerPort**: Server Port
- **BS2_SetSSLServerPort**: Server SSL Port
- **BS2_IsAutoConnection**:
- **BS2_SetAutoConnection**:

```
typedef void (*OnDeviceFound)(uint32_t deviceId);
typedef void (*OnDeviceAccepted)(BS2_DEVICE_ID deviceId);
typedef void (*OnDeviceConnected)(uint32_t deviceId);
typedef void (*OnDeviceDisconnected)(uint32_t deviceId);
typedef void (*OnAlarmFired)(BS2_DEVICE_ID deviceId, const BS2Event* event);
typedef void (*OnInputDetected)(BS2_DEVICE_ID deviceId, const BS2Event* event);
typedef void (*OnConfigChanged)(BS2_DEVICE_ID deviceId, uint32_t configMask);
```

1. OnDeviceFound

Subnet BioStar

2. OnDeviceAccepted

BioStar 가 BioStar

3. OnDeviceConnected

BioStar

4. OnDeviceDisconnected

BioStar

5. OnAlarmFired

Zone

6. OnInputDetected

가

7. OnConfigChanged

Configuration

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=ko:communication_api&rev=1540888150

Last update: **2018/10/30 17:29**