

# Table of Contents

**en\_part25\_intrusion\_zoneapi** ..... 1

# en\_part25\_intrusion\_zoneapi

- [BS2\\_GetIntrusionAlarmZone](#)
- [BS2\\_GetIntrusionAlarmZoneStatus](#)
- [BS2\\_GetAllIntrusionAlarmZoneStatus](#)
- [BS2\\_SetIntrusionAlarmZone](#)
- [BS2\\_SetIntrusionAlarmZoneAlarm](#)
- [BS2\\_RemoveIntrusionAlarmZone](#)
- [BS2\\_RemoveAllIntrusionAlarmZone](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar Device SDK**

Permanent link:

[http://kb.supremainc.com/bs2sdk/doku.php?id=wiki:ebook:en\\_part25\\_intrusion\\_zoneapi](http://kb.supremainc.com/bs2sdk/doku.php?id=wiki:ebook:en_part25_intrusion_zoneapi)

Last update: **2018/06/25 18:07**