

Table of Contents

BS2_SetLiftLockUnlockZoneAlarm	1
Declaration	1
Parameter	1
Return Value	1
See Also	1

[Zone Control API](#) > [BS2_SetLiftLockUnlockZoneAlarm](#)

BS2_SetLiftLockUnlockZoneAlarm

[+ 2.7.0] Configures the alarm status of the Lift Lock/Unlock zone.

Declaration

```
#include "BS_API.h"

int BS2_SetLiftLockUnlockZoneAlarm(void* context, uint32_t deviceId, uint8_t
alarmed, uint32_t* zoneIds, uint32_t zoneIdCount);
```

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *alarmed* : Whether the alarm has been triggered or not
- [In] *zoneIds* : List of Lift lock/unlock zone id
- [In] *zoneIdCount* : Number of Lift lock/unlock zone id list

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.

If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetLiftLockUnlockZone](#)

[BS2_GetAllLiftLockUnlockZone](#)

[BS2_GetLiftLockUnlockZoneStatus](#)

[BS2_GetAllLiftLockUnlockZoneStatus](#)

[BS2_SetLiftLockUnlockZone](#)

[BS2_RemoveLiftLockUnlockZone](#)

[BS2_RemoveAllLiftLockUnlockZone](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_setliftlockunlockzonealarm

Last update: **2020/07/29 11:30**

