

Table of Contents

Usb Exported Control API	1
---------------------------------------	----------

Usb Exported Control API

This API allows to control/manage Usb Exported.

- [BS2_GetUserListFromDir](#): Gets the enrolled user ID list from storage path in device.
- [BS2.GetUserInfosFromDir](#): Gets the user information of the given user ID from storage path in device.
- [BS2.GetUserInfosExFromDir](#): Gets the user information of the given user ID from storage path in device. (Including Job, phrase after v2.4)
- [BS2_GetLogFromDir](#): Gets certain amount of logs from storage path in device.
- [BS2_GetLogBlobFromDir](#): Gets certain amount of logs based on the event mask from storage path in device.
- [BS2_GetFilteredLogFromDir](#): Gets filtered logs from storage path in device.

From:

<https://kb.supremainc.com/kbtest/> - **BioStar 2 Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=en:use_exported_control_api&rev=1504590616

Last update: **2017/09/05 14:50**