

<b>BS2_GetUserListFromDir</b>	.....	1
.....	.....	1
.....	.....	1
.....	.....	1
.....	.....	1
.....	.....	1

USB Exported Control API > BS2\_GetUserListFromDir

## BS2\_GetUserListFromDir

[+ 2.5.0] USB

Data

가

```
#include "BS_API.h"

int BS2_GetUserListFromDir(void* context, const char* szDir, char** uidsObj,
uint32_t* numUid, IsAcceptableUserID ptrIsAcceptableUserID);
```

- [In] *context* : Context
- [Out] *szDir* : Data
- [Out] *uidsObjs* :
- [Out] *numUid* :
- [In] *ptrIsAcceptableUserID* : TBD

uidsObjs

BS2\_ReleaseObject

BS\_SDK\_SUCCESS

, 가

[BS2\\_AllocateUsbContext](#)  
[BS2\\_ReleaseUsbContext](#)  
[BS2.GetUserDatabaseInfoFromDir](#)  
[BS2.GetUserInfosFromDir](#)  
[BS2.GetUserDatasFromDir](#)  
[BS2.GetUserInfosExFromDir](#)  
[BS2.GetUserDatasExFromDir](#)  
[BS2\\_GetLogFromDir](#)  
[BS2\\_GetLogBlobFromDir](#)

## BS2\_GetFilteredLogFromDir

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

[http://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2\\_getuserlistfromdir](http://kb.supremainc.com/bs2sdk/doku.php?id=ko:bs2_getuserlistfromdir)

Last update: **2018/10/30 16:24**