

Table of Contents

How to Activate Biostar 2 License 1

Before Activating Biostar 2 License 1

How to Activate License for Biostar 2 Version 2.8.16 and Lower 1

Video Demo 4

[System Configuration](#), [BioStar 2](#), [License](#)

How to Activate Biostar 2 License


Before Activating Biostar 2 License

1. What is supported with BioStar 2's licenses?

Refer to the [FAQ article](#) for details.


2. What are global zone and local zone?

- Global Zone : TCP/IP based zone configuration (BioStar 2 server is a master of the zone)
- Local Zone : RS485 based zone configuration (Master device is a master of the zone)
- The zone master makes logical decisions and controls functionality

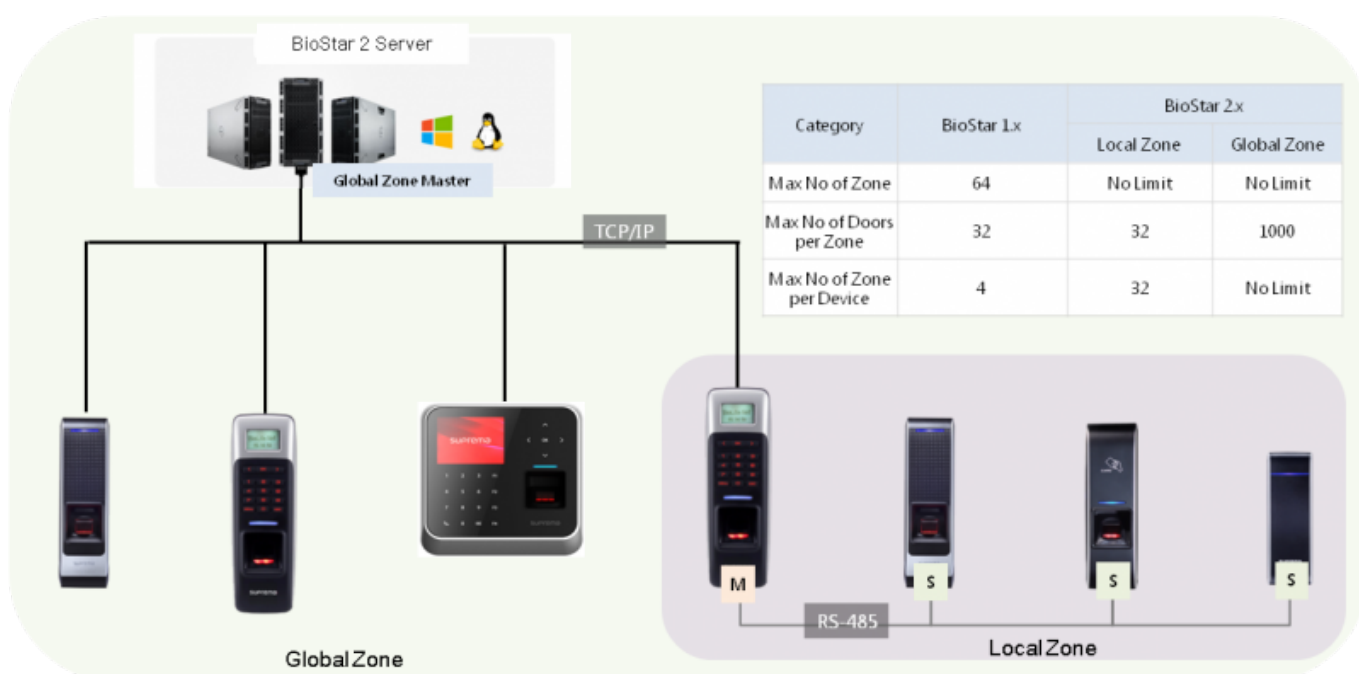


How to Activate License for Biostar 2 Version 2.8.16 and Lower

1. Go to the global setting and click **SERVER**.

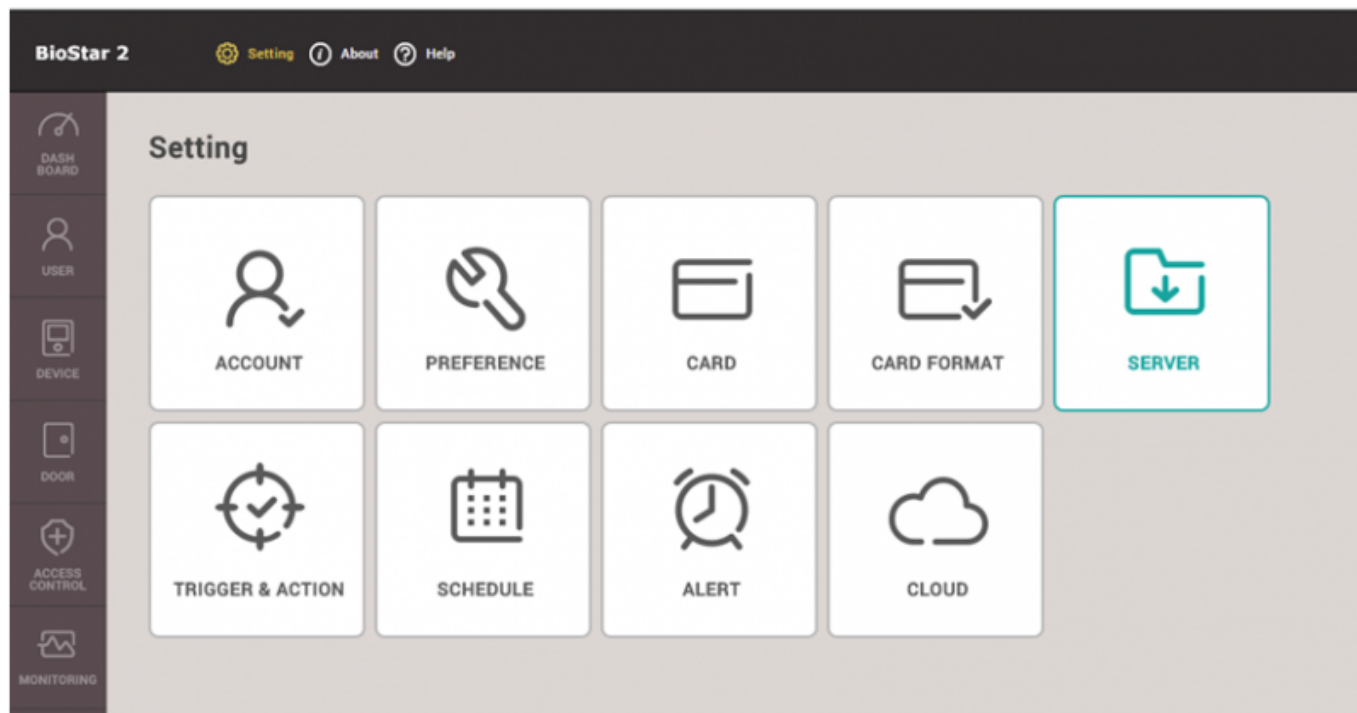


2. Check if the server is connected to the Internet. If connected, you can activate via online.

3. Enter the customer site name and activation key and click **Activate**. You can receive activation key from Suprema or your local distributor.

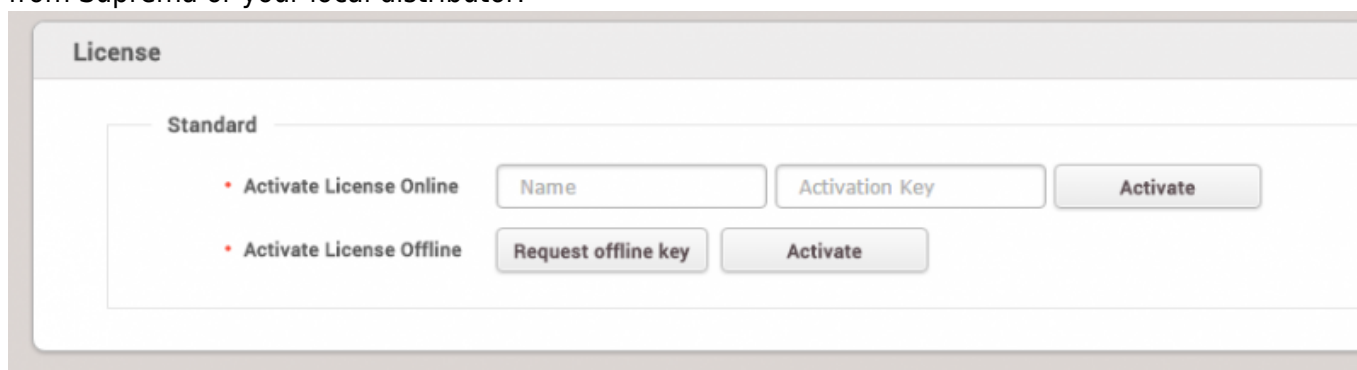

4. If the server is not connected to the Internet, click **Request offline Key** and download offline key request file.

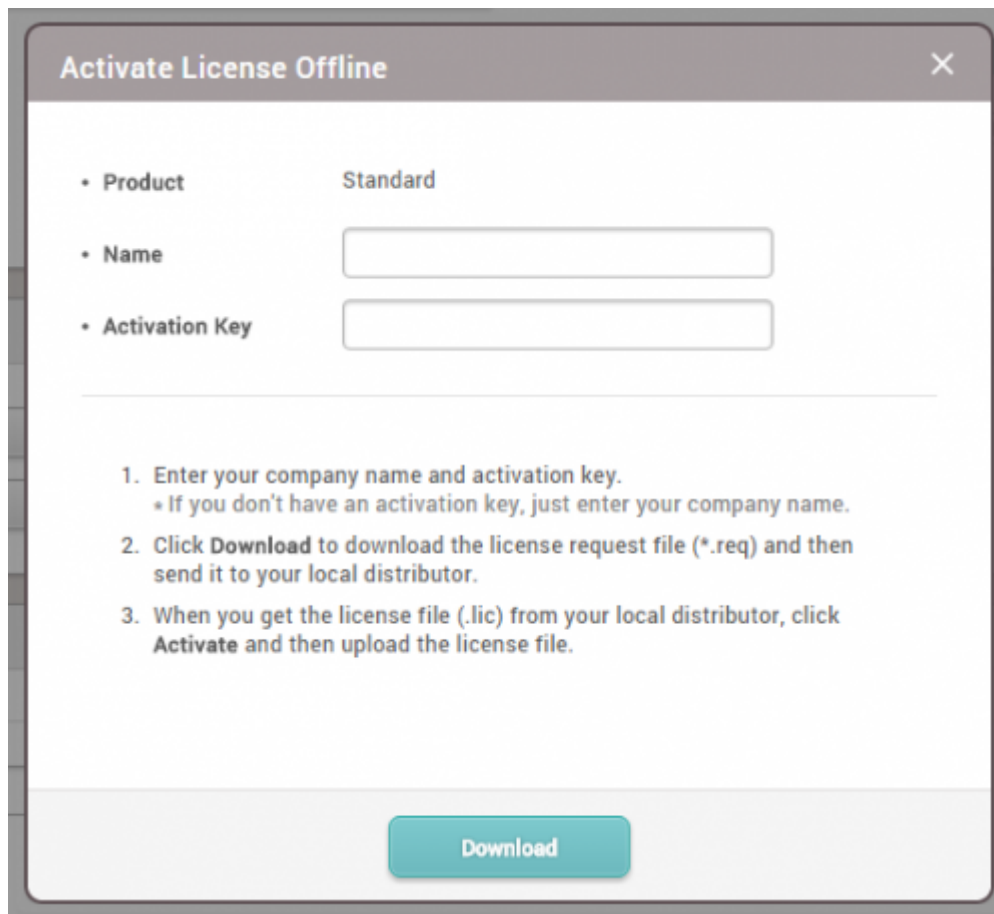

The dialog box is titled "Activate License Offline" and contains the following fields and instructions:

- Product: Standard
- Name:
- Activation Key:


Instructions:

1. Enter your company name and activation key.
* If you don't have an activation key, just enter your company name.
2. Click **Download** to download the license request file (*.req) and then send it to your local distributor.
3. When you get the license file (.lic) from your local distributor, click **Activate** and then upload the license file.

At the bottom, there is a teal button labeled "Download".

5. Send the offline key request file to Suprema and receive the offline license key in return.

6. Activate the license and check the information about compatible FW versions to use the updated new features.

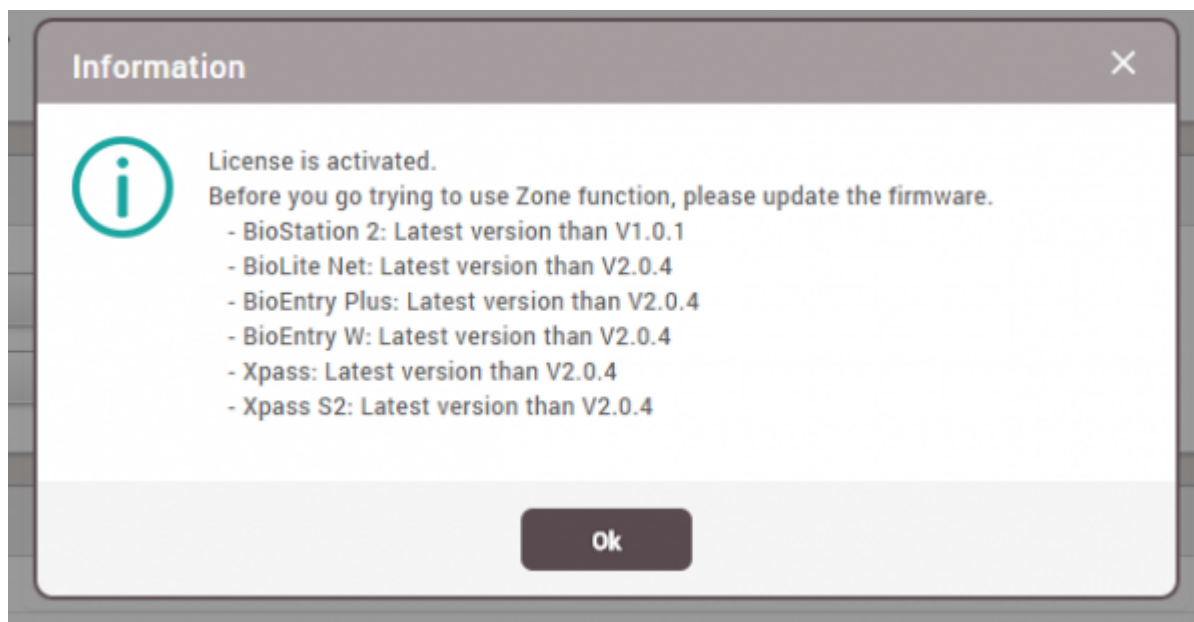

The dialog box is titled "Information" and contains the following information:

License is activated.
Before you go trying to use Zone function, please update the firmware.

- BioStation 2: Latest version than V1.0.1
- BioLite Net: Latest version than V2.0.4
- BioEntry Plus: Latest version than V2.0.4
- BioEntry W: Latest version than V2.0.4
- Xpass: Latest version than V2.0.4
- Xpass S2: Latest version than V2.0.4

At the bottom, there is a dark gray button labeled "Ok".

7. Activated license status can be checked from the Server setting and **About**.

License

Access Control

• Applied License

Advanced

• Issued to

Peter

• Expiry date

None

Time Attendance

• Activate License Online

Name

Activation Key

Activate

• Activate License Offline

Request offline key

Activate

Video

• Issued to

Peter

• Expiry date

None

Visitor

• Issued to

Peter

• Expiry date

None

About



BioStar 2

• BioStar Version

V2.8.14.72

AC Version

V2.8.14.49

TA Version

V2.8.13.36

Video Version

V2.8.12.1

• Access Control

Applied License: Advanced

Issued to: Peter

Expiry date: None

• Video

Issued to: Peter

Expiry date: None

• Visitor

Issued to: Peter

Expiry date: None

© 2021 Suprema Inc. All rights reserved.

Ok

Video Demo

[license.mp4](#)

From:

<http://kb.supremainc.com/knowledge/> -

Permanent link:

http://kb.supremainc.com/knowledge/doku.php?id=en:how_to_activate_license&rev=1682404356

Last update: **2023/04/25 15:32**