

Table of Contents


How to configure Custom Admin about Monitoring section 1

How to configure Custom Admin about Monitoring section


If you would like to find out what has changed since BioStar 2.6 and above, with regards to Custom Level, please refer to the article [How to Configure a Custom Level](#)

In BioStar 2.5 or below, all users who have the privilege of Monitoring can see all event logs which are generated in the Monitoring section. From Biostar 2.6, you can configure the accessible custom items such as User, Device, Door, Elevator and Zone to limit the items that can be monitored.

1. Go to the **Settings > ACCOUNT**.

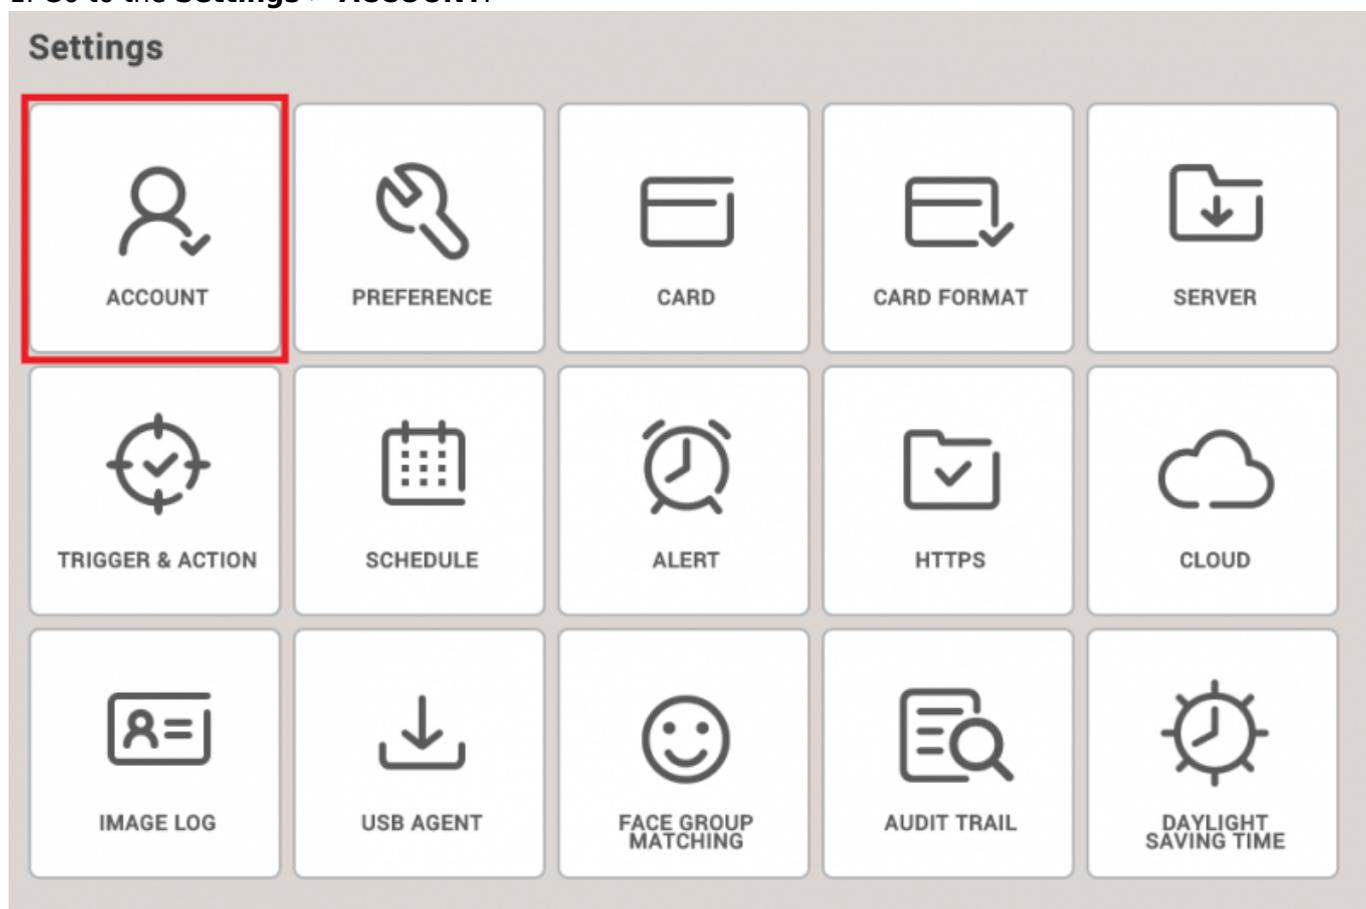

2. Create new Custom Level. At this point, you can configure the Monitoring’s custom items.

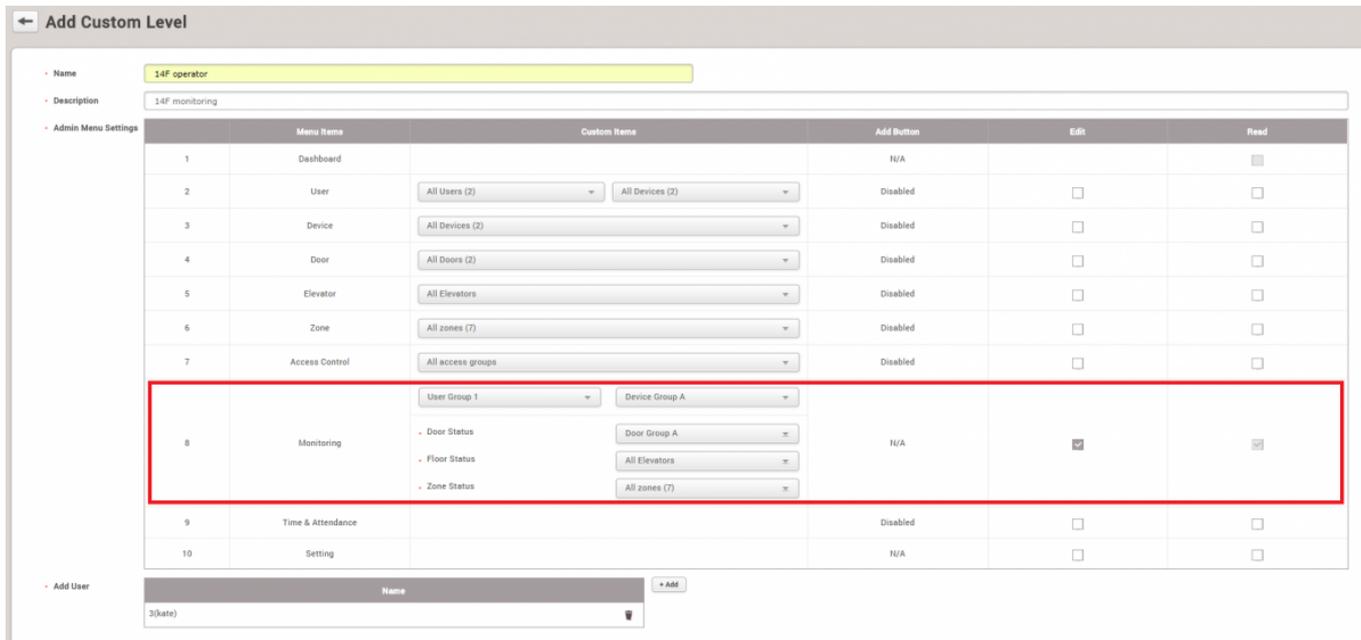

- Real-time Logs and event logs are filtered based on below condition.

Selected User Group **AND** Device Group (excluding door status, floor status and zone status)

- Door Status is displayed based on selected Door Group.
- Floor Status is displayed based on selected Elevator Group.
- Zone Status is displayed based on selected Zone Group.

From: <https://kb.supremainc.com/knowledge/> -
Permanent link: https://kb.supremainc.com/knowledge/doku.php?id=en:how_to_configure_custom_admin_about_monitoring_section
Last update: **2018/10/11 08:30**