

Table of Contents

How to Configure D2 Keypad	1
Adding as a Slave Device	1
Using the device as a Wiegand Reader	2

[System Configuration, BioStar 2, "D2, Keypad"](#)


How to Configure D2 Keypad

Xpass D2 Keypad is a new device introduced with BioStar 2.6.2. It is a dummy reader for reading cards or PIN, which means it doesn't perform data matching on the device.


The device can be used as slave device, or a Wiegand reader to send Wiegand output. The device sends out a Wiegand signal with the default 26bit format and the Wiegand configuration will be done with a separate tool.

Adding as a Slave Device

You will need a master device to add the slave D2 Keypad device. Refer to the article below to learn how to search a slave device. [RS485 Mode \(Master, Default, Slave\)](#)

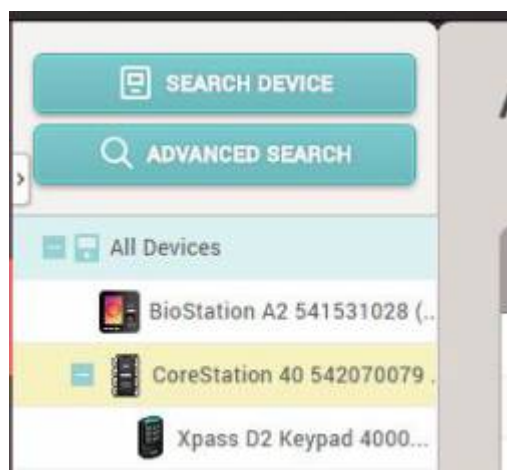

If you enable the option 'Input card ID from keypad', user can authenticate by entering the card number on the D2 Keypad.

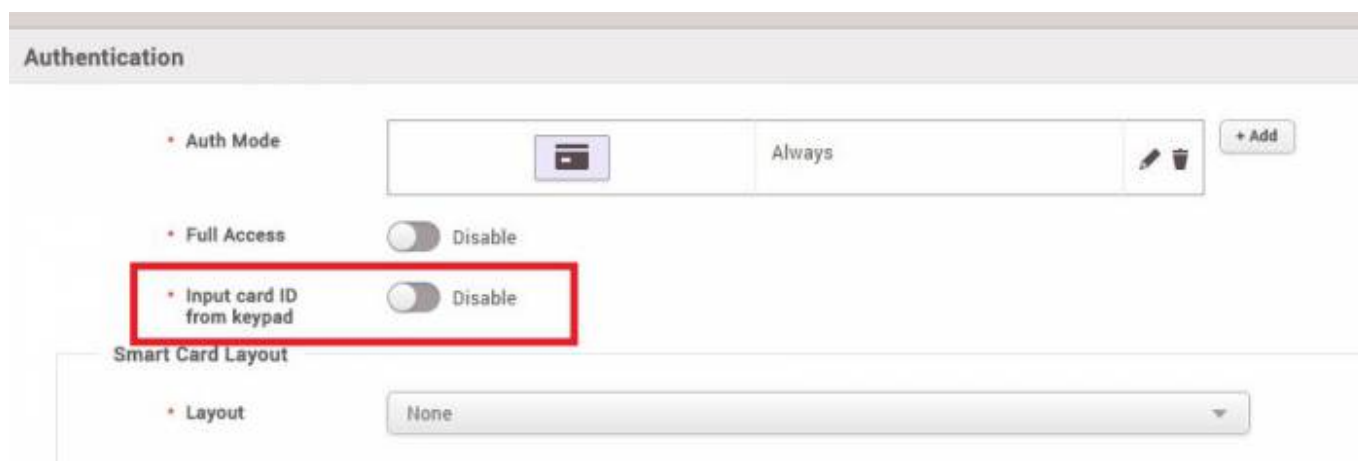


'Input card ID from keypad' is not supported when master CSN is set to LSB.

Possible key input ranges
The range of numbers that can be received by the keypad is 8 bytes (0 to 18,446,744,073,709,551,615)

Using the device as a Wiegand Reader

If you have already used the device as a slave device before, you must reset the device to use it as a Wiegand reader (sending Wiegand output).

1. Delete the device from BioStar 2 client as a slave device.

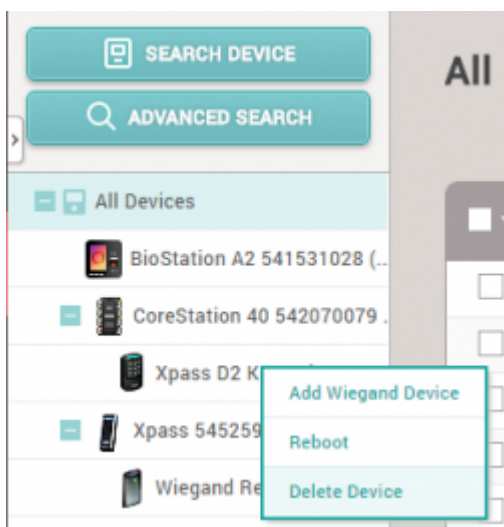


2. Detach the metal bracket from the device.

3. Press the reset button.



4. Use the device as a Wiegand reader by adding it as a **Wiegand Device** on a master device.

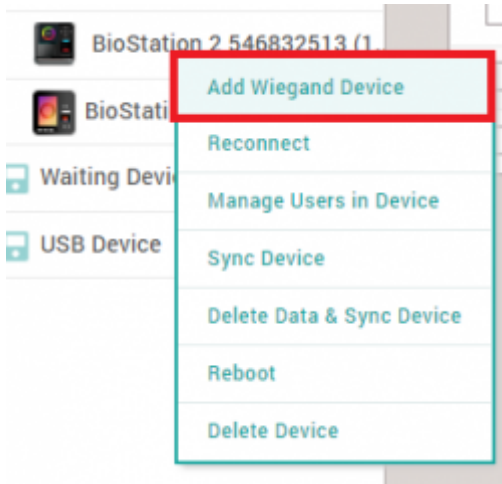

You cannot use the device as a slave device and use Wiegand output at the same time.

From:
<http://kb.supremainc.com/knowledge/> -
Permanent link:
http://kb.supremainc.com/knowledge./doku.php?id=en:how_to_configure_d2_keypad&rev=1550107658
Last update: **2019/02/14 10:27**