

# Table of Contents

Local Zone .....	1
See Also .....	1

## Local Zone

A zone set via an inter-device RS-485 connection. The master role for the zone is not performed by the server but by the master device.

### See Also

- [Global Zone](#)

From:

<https://kb.supremainc.com/knowledge/> -

Permanent link:

[https://kb.supremainc.com/knowledge/doku.php?id=en:local\\_zone](https://kb.supremainc.com/knowledge/doku.php?id=en:local_zone)

Last update: **2019/01/09 10:13**