2024/12/15 11:54 / 1.2.0 (V1.2.0\_181119)

1.2.0 (V1.2.0_181119)	1
`	
New Features and Improvements	
Main Fixes	1
Bug Fixes	1

2024/12/15 11:54 1/2 1.2.0 (V1.2.0 181119)

# 1.2.0 (**V1.2.0\_181119**)

2018-11-29

## **New Features and Improvements**

- 1. Support to the number of users, fingerprints, faces, and cards in Manage Users in Device.
- 2. Change the maximum value of the interval and width for the Wiegand Input.
- 3. Improves the data protection.
- Increase the items to encrypt the data.
- Support to setting the period for storing the personal information.
- 4. If the data transmission fails when communicating with OSDP, it is transmitted again.
- 5. The site key is initialized if a secure tamper event occurs
- 6. If an administrator has registered, modified, or deleted a user, the event log shows whether the editing was done on the server or on the device.
- 7. Support to the creation of up to 2048 Access Levels and Access Groups.
- 8. Support to AES encryption type for DESFire card.
- 9. Support to DESFire/DESFire EV1 Advanced option.
- 10. When using The bypass, The card ID is output as Wiegand even though a user authenticates with the AoC.

### **Main Fixes**

- 1. When using iCLASS Seos card, the card does not work as set even though the key setting is changed.
- 2. A code is added to prevent the authentication fails because the cache memory is broken.

### **Bug Fixes**

- 1. If the user uses the BS\_GetLogBlob command to get the door ID, the door ID is not output normally.
- 2. When communicating with OSDP, the LED color is displayed differently from the setting.
- 3. The device cannot read CSN because the card recognized as an NFC tag.

2024/12/15 11:54 2/2 1.2.0 (V1.2.0\_181119)

- **4.** Modified the firmware of that slave device so that it cannot be upgraded when a device not supported by the master device is connected as a slave.
- **5.** If the elevator is configured by connecting the OM-120 to the device, the relays operate differently from the previous status when the slave device is rebooted.
- **6.** The alarm can be released in the Floors status after a fire alarm occurs when the elevator is configured as a Fire Alarm Zone.

#### From:

http://kb.supremainc.com/knowledge/ -

Permanent link:

http://kb.supremainc.com/knowledge/doku.php?id=ko:bep2\_revision\_note\_120&rev=1622507437

Last update: 2021/06/01 09:30