	 	 	 1
 	 	 	 4

1/4

,

, BioStar 2,

		· 가
1 ~	. 71	
DASH BOARD	ADD ZONE	Fire Alarm
	> Q Anti-passback	
N LISER	Sire Alarm	Name
USEN		
		Add Zone ×
DEVICE		
•		Anti-passback
DOOR		Second Se
0		
ZONE		Apply Cancel
æ		
ACCESS		
CONTROL		

2.

•	: RS-485					가 '		
•	: TCP/IP	RS485		BioStar 2	가 '		,	

.

Configuration		
• Mode	Global	
• Door	BEW + 🕦	
Device / Input		Q
	All Doors	
	BEW	
larm	BS2 + BLN	
	BMS	
Action		

3.

.

Configuration				
• Mode	Cilobal	Active/Inactive     Active		
• Door	BEW + 🚺 👻			
Device / Input	Device / Input	Switch	Duration(ms)	+ Add
	Input Port 0 of BioLiteNet 538101264 Device	* 💽 Normally Open	100 *	¥

가

.

4.

		rm
	Action	
<ul> <li>Output</li> <li>Release All Alarm</li> <li>Reboot Device</li> <li>Disable Device</li> </ul>	<ul> <li>Output</li> <li>Relay 0 of BioLiteNet 538 </li> <li>Signal</li> <li>test </li> </ul>	tive

5. '

.

•

가



6.

Device	BioLiteNet 538101264
Alarm	Fire alarm zone alarm is detected
• Date	2015/09/17 10:43:59
Comments	

0 Do	Door Status								
₹ S	T Save Filter								
٠									
	BEW			Unlocked		10:43 UNLOCKED			
	BS2 + BLN			Unlocked		10:44 UNLOCKED			

7.

0 7	© Zone Status									
	Save Filter						Clear Alarm			
							Last Event			
	Fire Alarm	Test		Active	Normal		10:47 FIRE_ALARM_CLEAR			

•

.

2024/09/07 15:27

4/4

0	Door Status									
	Save Filter									
E						Last Event				
0	BEW		Closed	Locked		10:47 LOCKED				
	BS2 + BLN		Closed	Locked		10:48 LOCKED				

## fire.mp4

From: http://kb.supremainc.com/knowledge/ -

Permanent link: http://kb.supremainc.com/knowledge/doku.php?id=ko:how\_to\_configure\_firealarm\_zone

Last update: 2017/01/10 13:35