Table of Contents

BioStar 1, Log, Slave device

How to get log records from slave devices

When you configure zones on the BioStar client, you need to set master/slave relationships between the devices that belong to the same zone. You can connect the master device with the slave devices via RS485. In this case, you can collect log records of the slave devices through the master device.

In this example, we will set master/slave relationships between devices in the same access zone.

1. For starters, we create an access zone. Go to the **Doors** page and click **Add New Zone**.

BioStar V1.62				
Eile View Theme Option Administrator				
👄 Back 👄 Forward 🗐 Refresh 🔱 Fin	d User Print			
Doors	Doors			
Doors	Name	Door Open Period(sec)	Door Relay	Devices
Door1	Door1	0	0	151[192.168.0.74]
Zone	Door 2	0	0	60457[192.168.0.75]
_				
Tesh				
Task				
Add New Door				
Details				
Total : 2 Selected : Doors (2)				
User				
Doors				
Visual Map				
Camera				
🎉 Lift				
Access Control				
Monitoring				
Device				
Time and Attendance				
».				
Ready				CAP NUM SCRL

2. Configure the Add New Zone dialog and click OK.

Add New Zone	×
Name	My Access Zone
Туре	Access Zone 🔹
	OK Cancel

3. Click Add Device to add devices to the zone. This brings up the Add Device dialog. Choose

devices you want to add. The master/slave relationship will be automatically created.

BioStar V1.62							
	Eile View Theme Option Administrator Help						
Back m Forward 🚱 Refresh 🤱 Find User 🚔 Print							
Doors	Zone						
Doors Door 1 Door 2 Zone My Access Zone	Basic Information Name My Access Zone Type Access Zone Description						
Task	Synchronize User Info						
Add New Door	Synchronize Log Data Synchronize Time						
Details	Vi Device List						
Total : 1 Selected : My Access Zone	No Devices Attribute						
Camera							
🞉 lift							
Access Control							
Monitoring							
Device							
Time and Attendance	< III	•					
*	Add Device Delete Device Add Input Delete Input	Apply					
Ready	CAP	NUM SCRL					

Add Device	x
Select Device below Tree Device 100038[192.168.0.66] 151[192.168.0.74] 27722[192.168.0.64] 40930[192.168.0.110] 60457[192.168.0.75]	
Save Close	

4. Choose the options on the **Details** tab. You can choose what to synchronize between the devices in the zone.

• Synchronize User Info: This automatically synchronizes user information of the devices.

- Synchronize Log Data: This automatically synchronizes log records of the devices.
- Synchronize Time: This automatically synchronizes the times of the devices.

Eile View Theme Option Administrato						
Doors	Zone	•				
Doors Door 1 Door 2 Zone My Access Zone	Basic Information Name Description Details Alarm /	My Access Zone		Туре	Access Zone	
Task Image: Add New Door Image: Add New Zone Details	Synchronize U Synchronize L Synchronize T	og Data				
Total : 1 Selected : My Access Zone User Doors Visual Map Camera Lift	2 40930[1	92. 168.0.64] 92. 168.0. 110] 92. 168.0. 75]	Attribute Master Device			
Access Control Monitoring Device Time and Attendance	<	Add Devi	III Delete Device		Input Delete I	nput Apply
Ready		Add Devis	Delete Device	Add	input Delete I	CAP NUM SCRL

5. Click **Apply** to complete the configuration.

