

# Table of Contents

How to configure Custom Admin about Monitoring section .....	1
--	---


## How to configure Custom Admin about Monitoring section

If you would like to find out what has changed since BioStar 2.6 and above, with regards to Custom Level, please refer to the article

[How to Configure a Custom Level](#)

In BioStar 2.5 or below, all users who have the privilege of Monitoring can see all event logs which are generated in the Monitoring section. From Biostar 2.6, you can configure the accessible custom items such as User, Device, Door, Elevator and Zone to limit the items that can be monitored.

1. Go to the **Settings > ACCOUNT**.

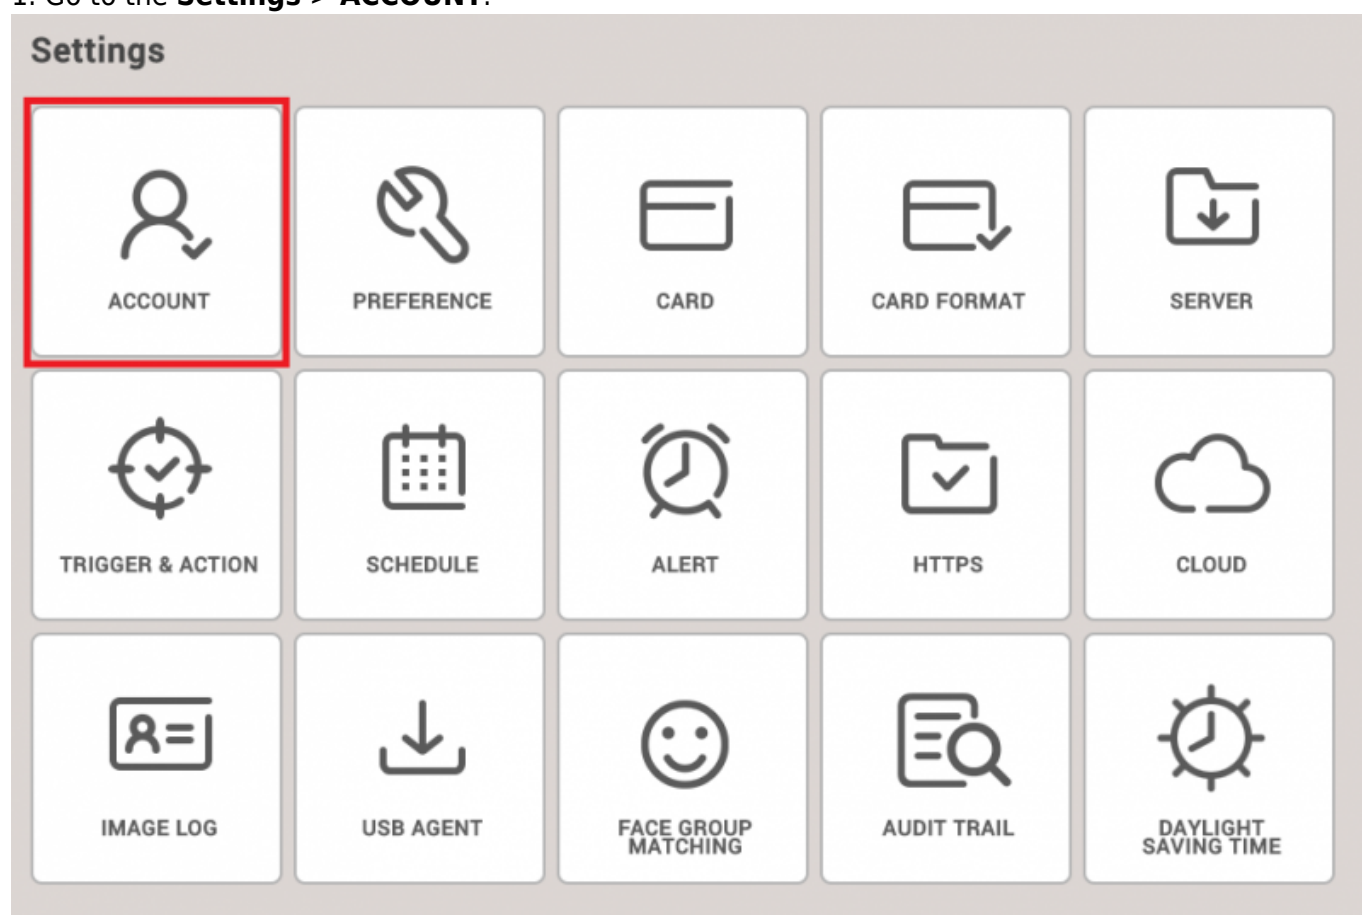

2. Create new Custom Level. At this point, you can configure the Monitoring's custom items.

**Add Custom Level**

Name: 14F operator

Description: 14F monitoring

Admin Menu Settings

	Menu Item	Custom Items	Add Button	Edit	Read
1	Dashboard		N/A		<input type="checkbox"/>
2	User	All Users (2)	Disabled	<input type="checkbox"/>	<input type="checkbox"/>
3	Device	All Devices (2)	Disabled	<input type="checkbox"/>	<input type="checkbox"/>
4	Door	All Doors (2)	Disabled	<input type="checkbox"/>	<input type="checkbox"/>
5	Elevator	All Elevators	Disabled	<input type="checkbox"/>	<input type="checkbox"/>
6	Zone	All zones (7)	Disabled	<input type="checkbox"/>	<input type="checkbox"/>
7	Access Control	All access groups	Disabled	<input type="checkbox"/>	<input type="checkbox"/>
8	Monitoring	User Group 1 Device Group A - Door Status - Floor Status - Zone Status	N/A	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
9	Time & Attendance		Disabled	<input type="checkbox"/>	<input type="checkbox"/>
10	Setting		N/A	<input type="checkbox"/>	<input type="checkbox"/>

Add User

Name: 3(kate)

+ Add

- Real-time Logs and event logs are filtered based on below condition.

Selected User Group **AND** Device Group (excluding door status, floor status and zone status)

- Door Status is displayed based on selected Door Group.
- Floor Status is displayed based on selected Elevator Group.
- Zone Status is displayed based on selected Zone Group.

From:

<http://kb.supremainc.com/knowledge/> -

Permanent link:

[http://kb.supremainc.com/knowledge/doku.php?id=en:how\\_to\\_configure\\_custom\\_admin\\_about\\_monitoring\\_section](http://kb.supremainc.com/knowledge/doku.php?id=en:how_to_configure_custom_admin_about_monitoring_section)

Last update: 2018/10/11 08:30