

# Table of Contents

How to Configure Live Video View ..... 1

Configuration ..... 1

Demonstation Video ..... 4

[System Configuration](#), [BioStar 2](#), [Video](#), ["Live, Video"](#)

# How to Configure Live Video View

Live Video View has been introduced in BioStar 2.6.2. You can now see the live feed from your video camera and also control the door from the live video view menu.

## Configuration

For in-depth basic video configuration and cautions refer to the following article: [How to use video](#)


1. Click on the **VIDEO** menu.
2. Click **Add New NVR**.
3. Input your NVR details.

The screenshot shows the 'Add New NVR' dialog box in the BioStar 2 interface. The dialog box is titled 'Add New NVR' and contains the following fields:


Field	Value
Name	Hikvision NVR
Manufacturer	HikVision
IP	192.168.12.120
Port	8000
ID	root
Password	*****

At the bottom of the dialog box, there are two buttons: 'Apply' and 'Cancel'. The 'Add New NVR' button in the background is highlighted with a red rectangle.


4. Click **Apply**.
5. Click **Add New Camera**.
6. Select your **NVR** and click **Next**.

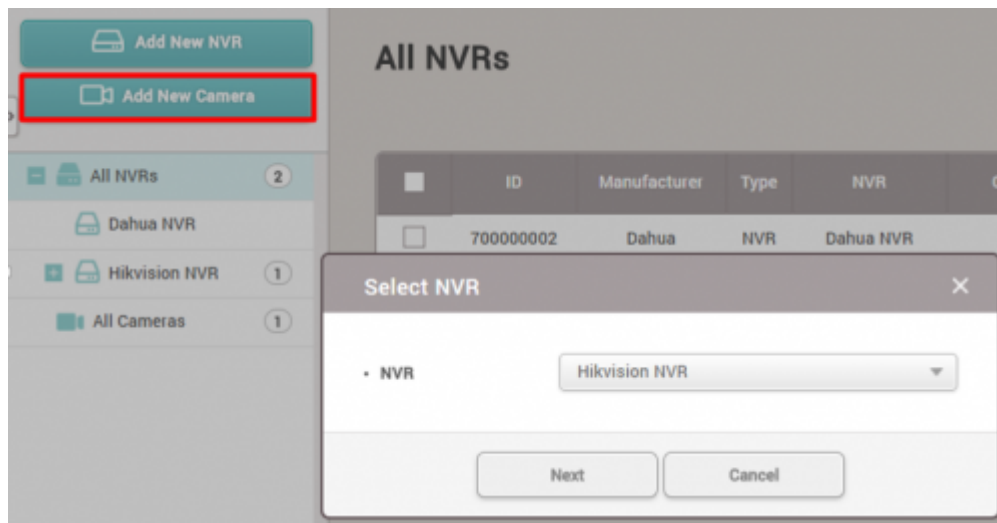

7. Select your camera and click **Add**.

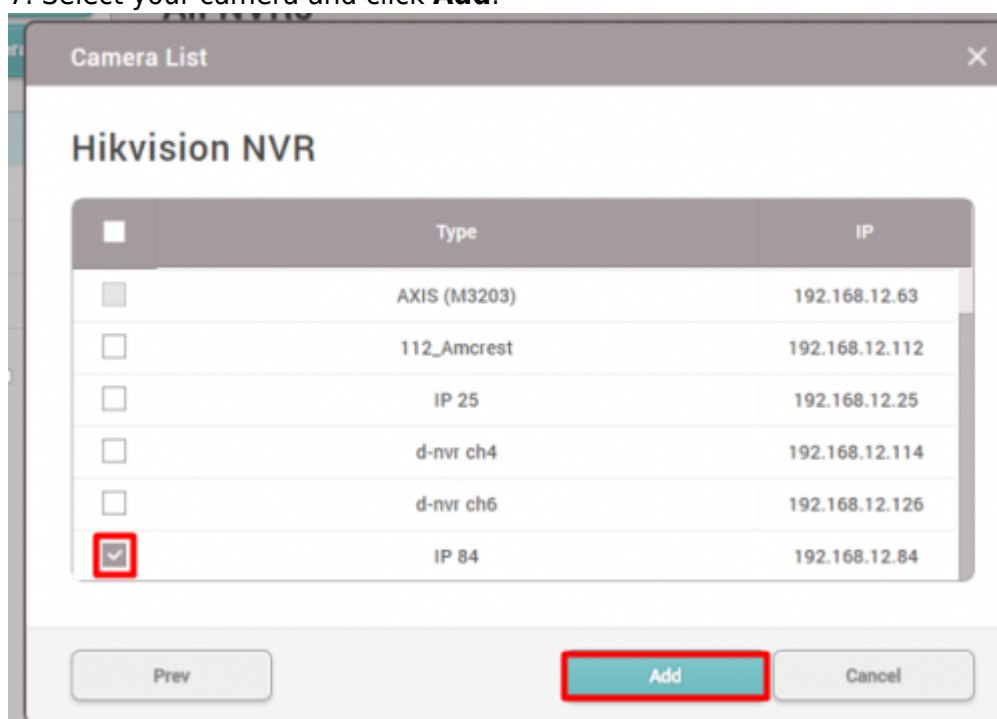

8. Click **All Cameras** and choose your camera to configure a Door.

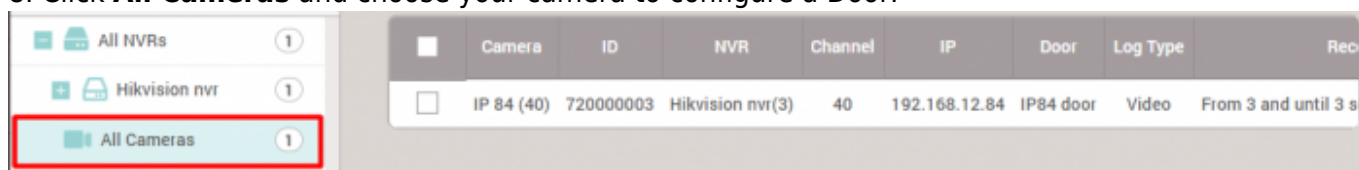

9. Choose a **Door** to assign the camera and click **+Add** to choose an event to use for the video log.

The screenshot shows a 'Configuration' window with two main sections: 'Video Log Setting' and 'Event'.

**Video Log Setting:**

- Start recording: 3 secs before an event
- End recording: 3 secs after an event


**Event:**

- Door: IP84 door (highlighted with a red box)
- Event: A table with columns 'Event' and 'Schedule'. The first row shows 'Device Disconnection Detected' and 'Always'. A '+ Add' button is to the right of the table.

At the bottom right, there are 'Apply' and 'Cancel' buttons. The 'Apply' button is highlighted with a red box.


10. Click **Apply**.

11. Go to the **MONITORING** menu's **Live Video View**.

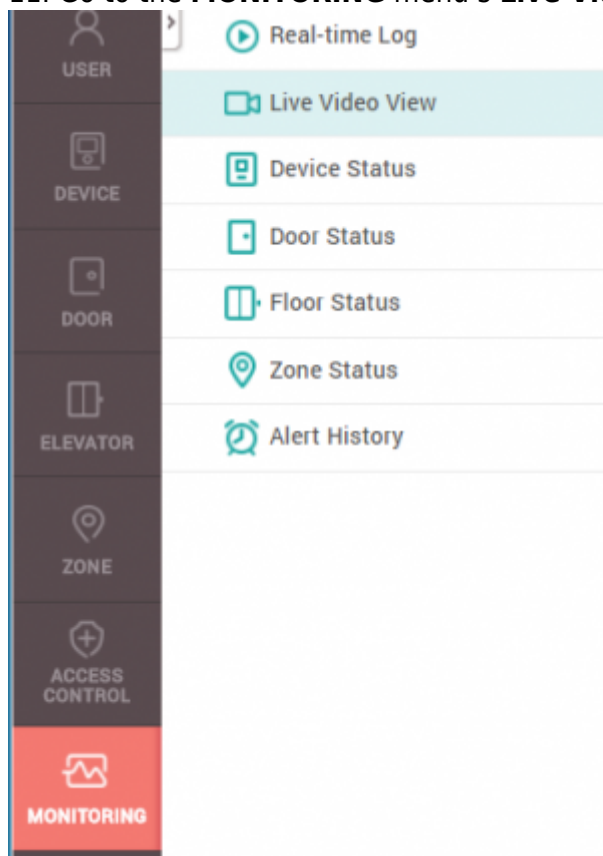


12. Go to the **MONITORING** menu's **Live Video View**.


13. Click on the dropdown box and choose a camera.

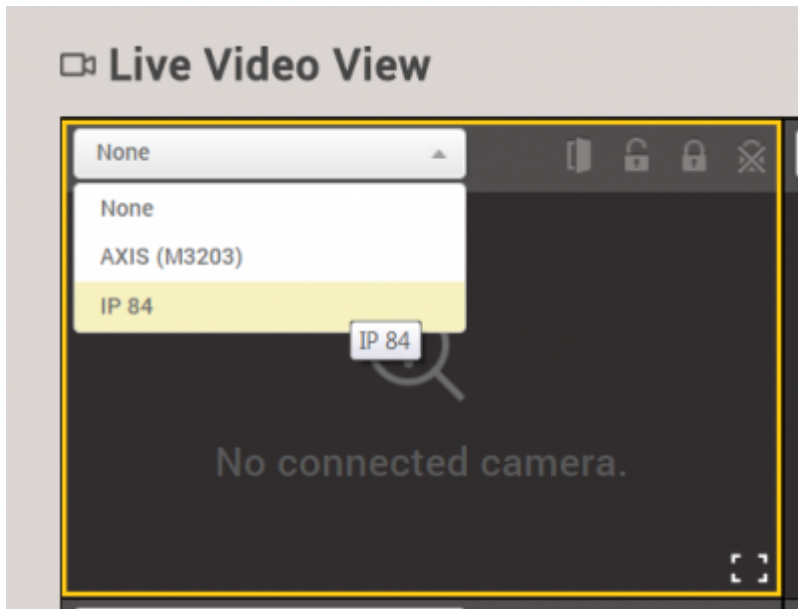

14. When the load complete the real time video should appear.

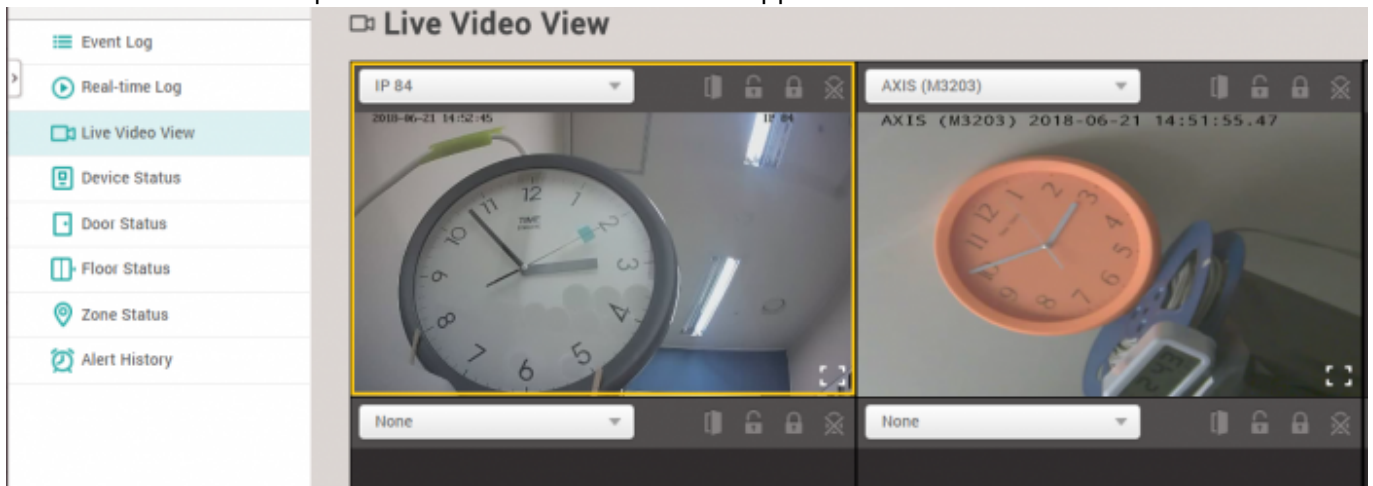

15. You can also control the door with the door icons visible beside the dropdown box (open, manual unlock, manual lock, release).

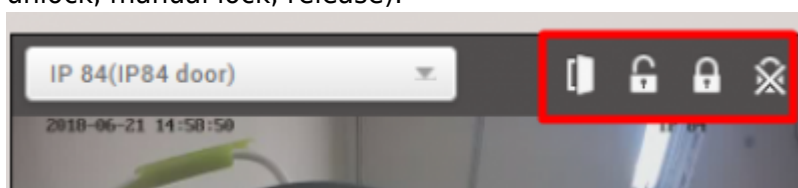

## Demonstation Video

[2x\\_sysconfig\\_live\\_video.mp4](#)

From:  
<http://kb.supremainc.com/knowledge/> -

Permanent link:  
[http://kb.supremainc.com/knowledge/doku.php?id=en:how\\_to\\_configure\\_live\\_video\\_view](http://kb.supremainc.com/knowledge/doku.php?id=en:how_to_configure_live_video_view)

Last update: **2018/07/06 11:29**

