

Table of Contents

Local Zone 1

See Also 1

Local Zone

A zone set via an inter-device RS-485 connection. The master role for the zone is not performed by the server but by the master device.

See Also

- [Global Zone](#)

From:

<http://kb.supremainc.com/knowledge/> -

Permanent link:

http://kb.supremainc.com/knowledge/doku.php?id=en:local_zone

Last update: **2019/01/09 10:13**