目次

デバイス接続解除時の通知ポッ	プアップメッセージの設定	 1

システム構成, BioStar 2

デバイス接続解除時の通知ポップアップメッセージの設定

BioStar

2.5.0から、デバイス接続解除に対する警報メッセージを設定できます。デバイスの接続が切れたら、警報メッセージがポップアップの形で表示されます。

1. 設定(Setting) > 警報(ALERT)に移動してください。



2. デバイス接続解除感知(Device Disconnection

Detected)のチェックボックスをクリックした後、確認(Apply)ボタンを押してください。

Derice Sissenection Detected Image: Parced door opened Image: Parced door opened Image: Parced door open alarmed Image: Pa		Device			Door			Authentication	
1 Derice restarted Image: Neided deer open alsomed	2	Device Disconnection Detected	5	~	Forced door opened	8		1:1 authentication failed	
R5-43 discenseid Image: Parced door open alarmed Image: Pa	1	Device restarted	8	~	Held door opened	8	1	1:1 duress authentication succeeded	
Image: Tamper on Image: Im	2	RS-485 disconnected	5		Forced door open alarmed	5		1:N authentication failed	5
1 Sugerniced input (Shirt) Image: Arcigoassback zone aliarm detected Image: Arcigoassback	2	Tamper on	5		Held door open alarmed	0	~	1:N duress authentication succeeded	5
Sugernised taput (Open) Image: Comparised taput (Open) AC Poorer Failure Image: Comparised taput (Open) Image: Comparised taput (Open)		Supervised input (Short)	8	~	Anti-passback zone alarm detected	8	~	Access denied (invalid access group)	8
AC Power Failure Image: Comparison of the comparison of		Supervised Input (Open)	5				2	Access denied (Disabled user)	
Image: Section of the section of th	2	AC Power Failure	5					Access denied (Expired)	5
Image: Second							~	Access denied (Blacklist)	8
Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules Image: Constraint of Parcel lock achedules <							2	Access denied (Hard Anti-passback)	
Image: Section of Section 1 Image: S								Access denied (Forced lock schedule)	8
Fake Fingerprint Detected							~	Access denied (Soft anti-passback)	8
							1	Fake Fingerprint Detected	

3.

警報メッセージを設定する場合は、ノート型アイコンをクリックして名前(Name)とメッセージ(Message)を入力してください。

	Device			Deer
~	Device Disconnection Detected		Forced door op	pened
	Device restarted			-
	RS-485 disconnected	Al	ert Message	e ×
	Tamper on			
	Supervised Input (Short)		lame	Device A2 Disconnection
	Supervised Input (Open)		lessage	Device(BioStation A2) is Disconnected
	AC Power Failure			
			sound Name	
		•	Play Options	None
				Apply Cancel

4. デバイスの接続が解除されると、下記のように警報メッセージが表示されます。

2021/03/04 21:27

3/3

デバイス接続解除時の通知ポップアップメッセージの設定



From:

https://kb.supremainc.com/knowledge/ -

Permanent link: https://kb.supremainc.com/knowledge/doku.php?id=ja:how_to_configure_an_alert_pop-up_message_when_a_device_is_disconnected

Last update: 2019/08/27 14:25